



ReadySystem™ 2U Users Guide

P/N 5001792A Revision B

Notice Page

NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Ampro Computers, Incorporated.

DISCLAIMER

Ampro Computers, Incorporated makes no representations or warranties with respect to the contents of this manual or of the associated Ampro products, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Ampro shall under no circumstances be liable for incidental or consequential damages or related expenses resulting from the use of this product, even if it has been notified of the possibility of such damages. Ampro reserves the right to revise this publication from time to time without obligation to notify any person of such revisions. If errors are found, please contact Ampro at the address listed below on the Notice page of this document.

TRADEMARKS

Ampro and the Ampro logo are registered trademarks, and CoreModule, Little Board, LittleBoard, MightyBoard, MiniModule, ReadyBoard, ReadyBox, ReadyPanel, and ReadySystem are trademarks of Ampro Computers, Inc. All other marks are the property of their respective companies.

REVISION HISTORY

Revision	Reason for Change	Date
A, A	Initial Release	Jan/06
A, B	Update/Changes	Aug/06

Ampro Computers, Incorporated
5215 Hellyer Avenue
San Jose, CA 95138-1007
Tel. 408 360-0200
Fax 408 360-0222
www.ampro.com

© Copyright 2006, Ampro Computers, Incorporated

Audience Assumptions

This guide is for the person who designs or uses computer related equipment, including but not limited to hardware and software design and implementation of the same. Ampro Computers, Inc. assumes you are qualified in designing and implementing your hardware designs and its related software into your prototype computer equipment.

Contents

Chapter 1	Setting Up the ReadySystem 2U	1
About the ReadySystem 2U	1
Using this Guide	1
Requirements	1
What's in the Box	2
Setup Steps	2
Preparations	2
Setting Up the Workspace	3
Installing the Mounting Hardware	3
Connecting the Peripherals	4
Applying Power to the ReadySystem 2U	6
Chapter 2	Installing ReadySystem 2U Options	7
Compact Flash Card Installation	7
Tools Required	7
Installing the Compact Flash Card	7
Removing the Compact Flash Card	9
ReadySystem 2U Disassembly/Re-Assembly	10
Tools Required	10
Removing the ReadyBoard from Enclosure	10
Installing the ReadyBoard into Enclosure	13
Connecting the Power Cables	18
Connecting the Remaining Cables	20
Memory Installation	22
Tools Required	22
Installation Guidelines	22
Removing the SODIMM	22
Installing the SODIMM	24
Appendix A	Technical Support	27
Appendix B	System Overview	29
EPIC Architecture	29
Product Description	30
ReadyBox 2U Features	30
I/O Panel Description	32
Power/IDE LED Definitions	34
Specifications	34
Environmental Specifications	34
Power Specifications	34
Physical Specifications	34
Mechanical Specifications	35
Access Plates, Mounting, and Cover Locations	39
List of Figures		
Figure 1-1. ReadySystem 2U Accessories	2
Figure 1-2. Installing Mounting Hardware	3
Figure 1-3. I/O Panel Controls, Connectors, and Indicators	4

Figure 2-1. Removing Compact Flash Protective Cover	8
Figure 2-2. Installing the Compact Flash Card	9
Figure 2-3. Removing ReadySystem Top Cover.....	11
Figure 2-4. Removing ReadySystem Rear Panel.....	12
Figure 2-5. Disconnecting the Cables	12
Figure 2-6. Removing ReadyBoard from Enclosure.....	13
Figure 2-7. Internal Cables Shown Separated	15
Figure 2-8. ReadyBoard Positioned Under LAN Ports	16
Figure 2-9. Installing ReadyBoard into Enclosure	17
Figure 2-10. Connector Locations (Typical ReadyBoard)	18
Figure 2-11. Connector and Jumper Pin-1 Locations (Typical ReadyBoard).....	19
Figure 2-12. Installing Power Cables.....	20
Figure 2-13. Installing Audio, USB, and COM Cables.....	21
Figure 2-14. Removing SODIMM from Socket	23
Figure 2-15. Installing SODIMM into Socket	25
Figure B-1. Stacking PC/104 Modules in ReadyBox 2U (Side view)	29
Figure B-2. ReadyBox 2U Enclosure (No ReadyBoard)	31
Figure B-3. ReadyBox 2U Enclosure with Optional Rack-Mount Hardware	31
Figure B-4. I/O Panel Controls and Connectors (Front view).....	32
Figure B-5. I/O Panel Access Openings (Front view).....	33
Figure B-6. Width and Depth Dimensions (Top view)	35
Figure B-7. Width and Height Dimensions (Front view)	35
Figure B-8. Benchtop or Surface Mounting Dimensions (Top view)	36
Figure B-9. Benchtop or Surface Mounting Dimensions (Front view)	36
Figure B-10. Wall Mounting Dimensions (Top view)	37
Figure B-11. Wall Mounting Dimensions (Rear panel view).....	37
Figure B-12. Optional Rack-Mounting Dimensions (Top view)	38
Figure B-13. Optional Rack-Mounting Dimensions (Front view)	38
Figure B-14. Access Plate Locations.....	39
Figure B-15. Standard Mounting Hardware.....	40
Figure B-16. Optional Rack Mounting Hardware.....	40
Figure B-17. Enclosure Cover Locations.....	41

List of Tables

Table 1-1. I/O Panel Connectors, Controls, and Indicators.....	5
Table A-1. Technical Support Contact Information	27
Table B-1. Installed Connectors or Controls.....	32
Table B-2. Connectors or Control/Indicator I/O Panel Openings	33
Table B-3. Power/IDE Activity LED Indicators.....	34
Table B-4. Environmental Requirements.....	34
Table B-5. Power Requirement	34
Table B-6. Weight and Footprint Dimensions.....	34
Table B-7. Access Plate Dimensions	39

Chapter 1 Setting Up the ReadySystem 2U

About the ReadySystem 2U

The ReadySystem™ products are intended for users of turn-key embedded systems, who prefer long lifecycle, configuration controlled computers over desktop grade systems with frequently changing motherboards. ReadySystem models feature the ReadyBoard single board computer (SBC), from the 400 MHz Intel Celeron® CPU to the Intel 1.4 GHz Pentium® M 738 CPU. The desired operating system (OS) is pre-loaded onto the internal 40 GB (or greater) 2 ½" hard disk drive (HDD). Just load your application software and you are ready to use your system applications.

Using this Guide

This guide provides the most efficient way to set up your ReadySystem 2U with your desired Operating System (OS). The instructions provided in this guide include:

- Removing the ReadySystem™ 2U from the shipping container and inventorying the accessories
- Connecting peripherals to the ReadySystem 2U
- Powering up the ReadySystem 2U

Information not provided in this Users Guide includes:

- ReadyBoard model specifications
- Environmental requirements
- ReadyBoard model connector/pin numbers and definitions
- Operating System programming, or operating instructions

NOTE	Refer to the specific Ampro OS manual or the OS manufacturer's manual for instructions when using the OS software.
-------------	--

Requirements

The following peripherals and devices are needed to make full use of the ReadySystem 2U.

- Peripherals (Customer provided):
 - ◆ PS/2 Keyboard and PS/2 Mouse
 - ◆ CRT (VGA) Monitor
- Power Cord and AC-DC Adapter (Ampro or Customer provided DC supply):
 - ◆ AC to DC (+12 VDC or +24 VDC) *Brick* Power Adapter (with screw-type mating connector)

CAUTION	The ReadySystem 2U only accepts 12VDC or 24VDC power. Voltages other than 12 or 24 will damage the system.
----------------	--

- Optional Devices/Connections (Customer provided):
 - ◆ Ethernet (LAN) connection
 - ◆ USB Devices, including a keyboard and mouse
 - ◆ Up to two PC/104 expansion modules

What's in the Box

The Contents List identifies the items in the shipping container for the ReadySystem 2U QuickStart Kit. Production quantities of the ReadySystem 2U, except for the first of multiple boxes, may not contain all of the optional items listed for the QuickStart Kit, but all boxes will have the standard items such as the mounting hardware and the PS/2 Y-cable. The optional items, such as the power adapter, power cords, and rack mount kit may be shipped separately. See Figure 1-1.

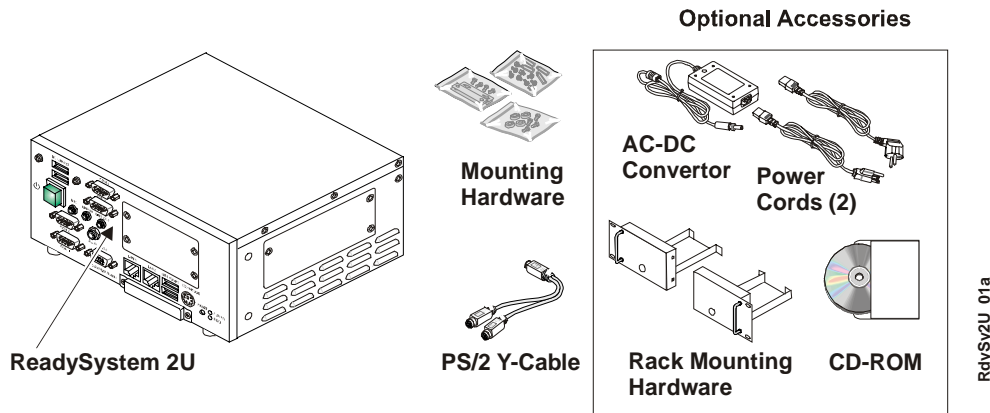


Figure 1-1. ReadySystem 2U Accessories

Setup Steps

It is important to follow the setup steps in this section in the exact order listed here, but skip any steps that do not apply to your situation. References are provided to chapters within this guide or other Ampro manuals for more information about installation and use of this ReadySystem 2U.

Preparations

1) Open shipping box	<ul style="list-style-type: none"> • Locate the ReadySystem 2U Contents List. See Figure 1-1. • Unpack the contents of the shipping box.
2) Verify Contents	<ul style="list-style-type: none"> • Verify the contents of the shipping box against the Contents List included with your ReadySystem 2U shipping box. • If anything is missing or damaged, call your sales representative. Refer to Appendix A for contact information.
3) Support Documentation (ReadyBoard model Documentation and Support Software (Doc & SW) CD-ROM located in the first QuickStart Kit)	<p><i>ReadySystem 2U Users Guide</i></p> <p>This document describes how to setup and power up the ReadySystem 2U and is provided on the ReadyBoard model Doc & SW CD-ROM as a PDF file.</p>
	<p><i>ReadyBoard Model Reference Manual</i></p> <p>This document describes the ReadyBoard model used in the ReadySystem 2U enclosure and provides detailed reference information for your ReadyBoard and is located on the ReadyBoard model Doc & SW CD-ROM as a PDF file.</p>
	<p><i>ReadyBoard Model QuickStart Guide</i></p> <p>This document describes how to setup, install, and power up the ReadyBoard model installed inside the ReadySystem 2U enclosure and is located on the ReadyBoard model Doc & SW CD-ROM as a PDF file.</p>
	<p><i>Operating System Manual(s)</i></p> <p>These documents describe how to use the desired operating system (OS) with the ReadySystem 2U and provide more detailed programming and operating information. These documents may or may not be provided with ReadySystem 2U depending on the specific licensing requirements.</p>

Setting Up the Workspace

CAUTION	<p>To prevent damage to the ReadySystem 2U, ensure there is sufficient clearance around the air vents for unrestricted airflow.</p> <p>The air temperature inside the enclosure could rise above the specified operating temperature limits if the airflow through the vents is restricted.</p>
----------------	---

4) Select workbench location	<ul style="list-style-type: none"> The workbench location should be a flat clean surface for setup and operation (including the connection of any external peripherals and optional devices). Ensure sufficient airflow clearance exists around the complete enclosure.
5) Unpack ReadySystem 2U	<ul style="list-style-type: none"> Remove the ReadySystem 2U from its shipping container and place it on a flat work surface. <p>The ReadyBoard model and the hard drive with the desired OS pre-installed form a complete system ready for operation.</p>

Installing the Mounting Hardware

6) Connect the appropriate mounting hardware	<ul style="list-style-type: none"> Connect the mounting hardware for surface or wall mounting to the bottom or rear of the ReadySystem 2U. See Figure 1-2. <p>The four plastic feet are mounted prior to shipment and will protect the paint finish on the bottom of the enclosure.</p> <p>Optional rack mount brackets are available for mounting the ReadySystem 2U into the standard 2U rack mounting space.</p>
--	--

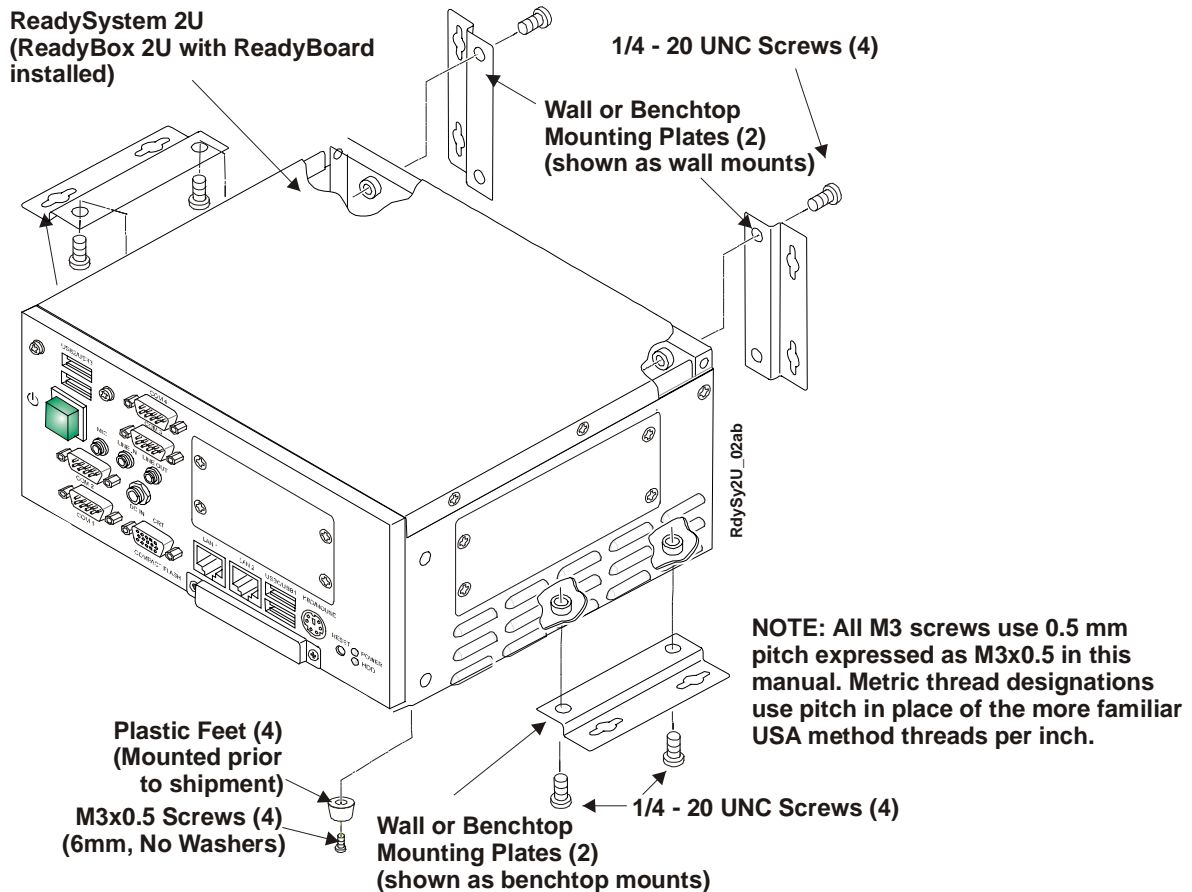
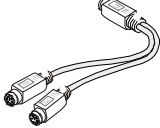


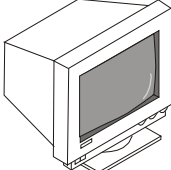


Figure 1-2. Installing Mounting Hardware

Connecting the Peripherals

<p>7) Connect the Y-cable and the respective peripheral cables/ devices</p>	<ul style="list-style-type: none"> This includes the Y-cable for the PS/2 keyboard & mouse. <p>Refer to Figure 1-3 and Table 1-1 for location and description of the connectors and controls.</p>
	<ul style="list-style-type: none"> Connect the PS/2 Keyboard & Mouse Y-cable assembly to the Keyboard/Mouse port on the ReadySystem 2U I/O Panel. See Figure 1-3. <p>This cable assembly provides two connectors for the PS/2 Keyboard and PS/2 Mouse shared port with icons for the specific device.</p>
	<ul style="list-style-type: none"> Connect the keyboard to the free Y-cable connector with keyboard icon on it.
	<ul style="list-style-type: none"> Connect the PS/2 mouse to the Y-cable connector with the respective mouse icon.
	<ul style="list-style-type: none"> Connect the CRT (VGA) monitor through its 15-pin cable to the CRT (VGA) connector on the I/O Panel of the ReadySystem 2U. See Figure 1-3.

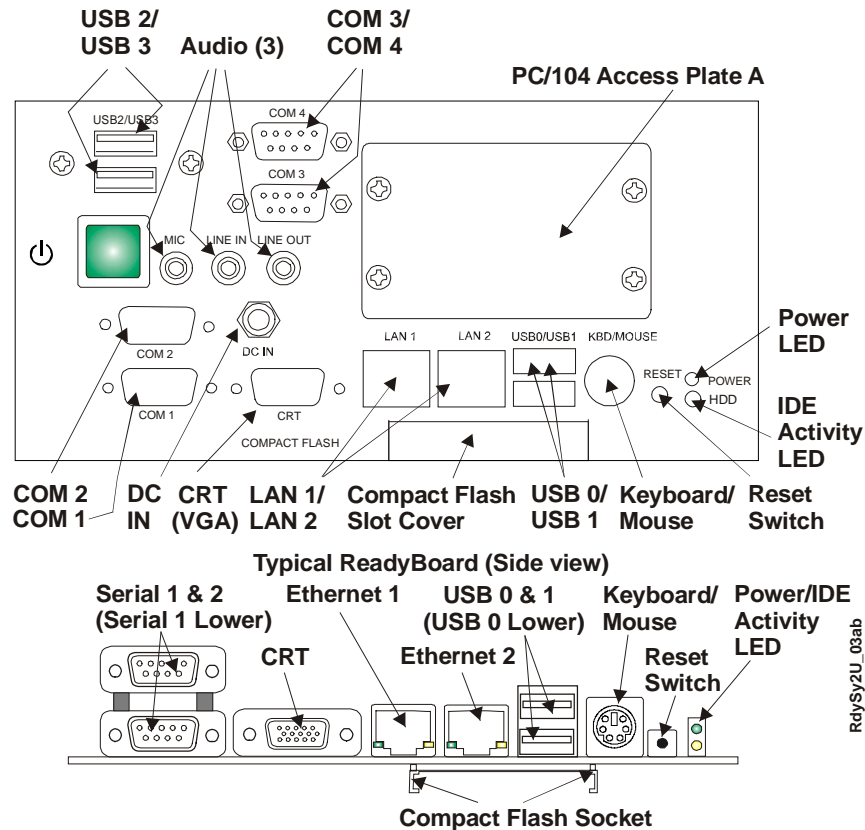


Figure 1-3. I/O Panel Controls, Connectors, and Indicators

NOTE ReadyBoard models with only one Ethernet connector (LAN 1) have a cover over the LAN 2 port.


Table 1-1. I/O Panel Connectors, Controls, and Indicators

Control/Connector	Description
Power Switch	This momentary push button Power Switch controls DC power and has an internal 2-wire cable, 5-pin connector attached to the ReadyBoard.
DC IN	This 2-pin coaxial connector is connected to the internal DC regulator and accepts 12 VDC or 24 VDC +/- 5% from an AC-to-DC converter (<i>Brick</i> power supply) or a customer provided DC power supply with compatible cord.
CRT (VGA)	Use this standard 15-pin (DB15) connector for the video connection. This connector is provided on the ReadyBoard.
Keyboard/Mouse	Use this PS/2 connector for Keyboard & Mouse connected through the required the PS/2 Y-cable adapter provided in the ReadySystem 2U QuickStart Kit or shipping container. The Y-cable has icons on each cable for the respective mouse or keyboard connection. This PS/2 connector is on the ReadyBoard.
USB 0 & 1	Use these two USB 4-pin connectors for the first two USB devices connected to the ReadySystem 2U. These USB type A connectors are on the ReadyBoard.
USB 2 & 3	Use these two USB 4-pin connectors for any additional USB devices. These USB connectors and the respective internal cables are connected to the ReadyBoard installed inside the enclosure.
LAN 1 (Ethernet 1)	This Ethernet port is typically used for the 10/100BaseT Ethernet connection. This 8-pin (RJ45) connector is provided on the ReadyBoard.
LAN 2 (Ethernet 2)	This Ethernet port is typically used for the Gigabit Ethernet (10/100/1000BaseT) connection, if provided on the ReadyBoard model (10-pin RJ45 connector). If not, it uses the standard 8-pin RJ45 connector for 10/100BaseT Ethernet. This connector is provided on the ReadyBoard. This port is covered for single Ethernet ReadyBoard modules.
COM 1 & COM 2 (Serial 1 & Serial 2)	Use these two 9-pin (DB9) serial ports for the standard RS232 connections to the ReadySystem 2U. These two connectors are provided on the ReadyBoard.
COM 3 & COM 4 (Serial 3 & Serial 4)	Use these two serial ports (DB9, 9-pin) for the standard RS-232 and RS-485/RS-422 connections to the ReadySystem. These two serial ports and the respective internal cables are connected to the ReadyBoard installed inside the enclosure..
AUDIO: MIC, Line In, Line Out	Use these three Audio In/Out connectors for the standard Stereo In/Out and MIC in connections to the ReadySystem. These Audio connectors and the respective internal cables are connected to the ReadyBoard installed in the enclosure.
Power-On LED	This green power-on indicator, located on the ReadyBoard, glows when power is turned on and goes dark when power is turned off to the ReadySystem 2U.
HDD Activity LED	This yellow activity indicator, located on the ReadyBoard, flickers when there is I/O activity for the IDE HDD or compact flash card used with the ReadySystem.
Reset Button	Press this reset button momentarily (located on the ReadyBoard) to reset the ReadySystem (hard reset).
Compact Flash Cover and Slot	This compact flash cover and slot (not shown) protects the compact flash card if installed, and ensures good EMI shielding for the ReadySystem 2U.
Compact Flash Socket	The compact flash socket (not shown) is provided on the underside of the ReadyBoard and accepts the compact flash card, if installed, through the opening in the I/O panel of the ReadySystem 2U.
Hard Disk Drive (2 ½")	The rear panel assembly holds a 40 GB (or greater), 2 ½" hard disk drive (HDD) installed inside the enclosure and connected to the ReadyBoard.

NOTE

If you wish to connect a floppy disk drive (FDD) or CD-ROM to the ReadySystem 2U, you can use one of the USB ports to connect the device.

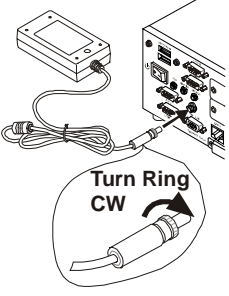Applying Power to the ReadySystem 2U

<p>8) Power up the ReadySystem 2U</p> 	<ul style="list-style-type: none"> Connect the DC power adapter or customer supplied DC supply into DC IN jack of ReadySystem 2U. See Figure 1-3. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>NOTE Power supplied to the unit must be within the allowed +12VDC +/- 5% or +24VDC +/-5%. Failure to provide proper power may damage the system and void the warranty.</p> </div> <ul style="list-style-type: none"> Plug the CRT monitor's power cord into an AC outlet, and turn on the monitor. See Figure 1-3. Connect the DC power adapter or DC supply into an AC outlet. Press the ReadySystem 2U's momentary power switch (\approx 1 sec) before continuing. See Figure 1-3 and Table 1-1.
<p>9) Verify the ReadySystem 2U powers on satisfactorily</p>	<ul style="list-style-type: none"> If you want to enter the BIOS Setup before the operating system loads, press the key during POST at the prompt. Use BIOS Setup during the initial boot to set the desired options (including time and date, etc.). You should see POST complete successfully before the system starts loading the operating system. If you are using Linux, the boot loader will appear first, similar to the one shown below with the desired OS name displayed. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>NOTE The 40 GB (or greater) hard disk drive (2 1/2") installed in the ReadySystem 2U enclosure comes with three partitions for the OS and swap space.</p> </div>
<p>(The Linux 2.6 OS is shown as an example.)</p> <p>GNU GRUB version 0.95 (632k lower/250768 upper memory)</p> <div style="border: 1px solid black; padding: 5px; margin: 5px auto; width: fit-content;"> <p>Fedora Core (2.6.9-xxx)</p> </div> <p style="text-align: right; font-size: small;">ReadySystem 2U_24a</p> <p>Use the \uparrow and \downarrow keys to select which entry is highlighted. Press Enter to boot the selected OS, 'e' to edit the commands before booting, 'a' to modify the kernel arguments before booting, or 'c' for a command-line.</p>	
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <p>NOTE The GNU GRUB boot loader screen will continue to display indefinitely, unless you execute one of the listed options.</p> </div>	
<p>10) Using the Operating System (OS)</p>	<ul style="list-style-type: none"> You should see a prompt of some kind indicating the OS is loading, or has loaded, as you view the screen at this point. If you are required to log into the OS, use <i>root</i> for the admin name and <i>software</i> as the password to log on. If you are logging in as a normal user, use <i>software</i> for the name and password. Refer to the desired OS manual (Ampro's or OS Manufacturers), that may or may not be provided with the ReadySystem, (depends on licensing agreements) for more information. If you require drivers not installed on the HDD (2 1/2") located inside the ReadySystem, refer to ReadyBoard model Doc & SW CD-ROM for additional drivers and instructions.

Chapter 2 Installing ReadySystem 2U Options

The procedures in this chapter describe how to install or remove the ReadySystem 2U supported options. This includes removing/installing the compact flash card and its cover, as well as removing the ReadyBoard model SBC from the ReadySystem 2U enclosure and removing/installing memory.

NOTE	<p>The ReadyBoard 700 is used in these ReadyBoard examples, but you will need to refer to the specific documentation referenced here for your specific ReadyBoard model to locate and identify the jumper and connector locations that apply to your specific ReadyBoard model.</p> <p>Refer to the ReadyBoard model QuickStart Guide, or the ReadyBoard model Reference Manual for more specific installation/removal information than is provided in this Chapter.</p>
-------------	--

Compact Flash Card Installation

This brief procedure describes how to remove the protective cover from the compact flash opening in the I/O panel and installing the compact flash card into the open slot. Refer to the ReadyBoard model documentation for specific compact flash jumper settings and compatibility.

NOTE	<p>You may use compact flash cards (Type I or II) from commercial vendors. Ensure you verify the firmware bit status, DMA, or UDMA compatibility of the compact flash card before purchasing. Not all CF card vendors define or support these parameters. Consult the ReadyBoard product Hardware Release Notes and your compact flash card vendor for these parameter compatibilities.</p>
-------------	---

Tools Required

Use these tools to remove and install the compact flash card into or out of the ReadySystem 2U.

- Small to medium Phillips screwdriver
- Anti-static service kit - Use a complete anti-static service kit (or the equivalent) to remove or install the compact flash card. A complete anti-static service kit should include a static-dissipating work surface, a chassis clip lead, and a wrist or ankle strap.

Installing the Compact Flash Card

1. Prepare the ReadySystem 2U for compact flash (CF) card installation:
 - ◆ If the ReadySystem is already prepared for compact flash installation, including removal of the CF cover, with power turned off and the coaxial power cable disconnected, skip to Step 5.
 - ◆ If the ReadySystem has power applied and operating, continue with the next step.

CAUTION	<p>To prevent damage to the ReadyBoard, ensure the power switch on the ReadySystem is turned off and the coaxial power cable has been disconnected from the DC IN connector.</p>
----------------	--

2. Initiate a shut down sequence through the OS, or hold in the power switch for 4-6 seconds to turn off power.

The Power LED should turn off completely when the power is turned off.

3. Disconnect the coaxial power cable from the DC IN connector.

CAUTION

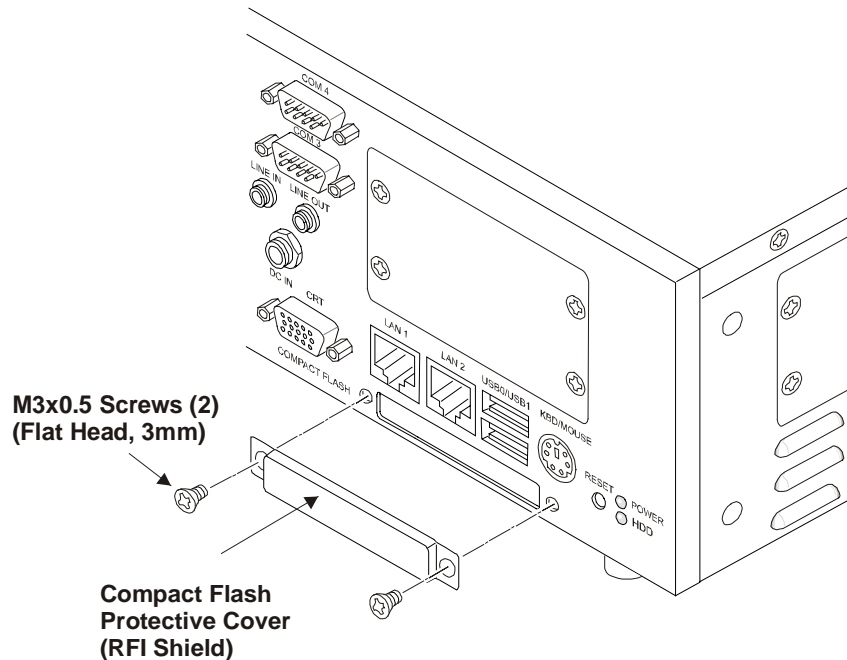
To prevent damage to the ReadyBoard or the compact flash card, ensure you discharge yourself and follow good Electrostatic Discharge principals before touching components. The ReadyBoard and the compact flash card are sensitive to static electricity and easily can be damaged by improper handling. Do the following when handling either one:

Always use an anti-static wrist/ankle strap and a grounding mat.

Leave the compact flash in the anti-static bag until you are ready to install it.

Before you remove a compact flash from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.

4. Use a Phillips screwdriver to remove the compact flash cover and place the two screws in a safe place for use later. See Figure 2-1.
5. If necessary, inspect the socket for bent pins or debris on the pins of the compact flash socket.
6. Remove the compact flash card from its protective bag, handling the compact flash card by its edges.



RdySy2U_04ab

Figure 2-1. Removing Compact Flash Protective Cover

CAUTION

To prevent damage to the ReadyBoard or the compact flash card, do not force the compact flash card into the slot. If you have to force the compact flash card into the slot, it is not installed correctly.

The guides on the compact flash sockets on the ReadyBoard series have enough flexibility to expand when the CF is installed incorrectly.

7. Insert the compact flash card into the opening provided by matching the pin-1 orientation of the compact flash card with the arrowhead on the I/O panel. See Figure 2-2.

NOTE The keyed slots and lip (or catch edge) on the compact flash card are used to install into the socket in only one orientation. Pin-1 should be down and to the right as shown in Figure 2-2.

8. Push the compact flash card into the opening until it firmly seats into the socket and mates with the pins. See Figure 2-2.

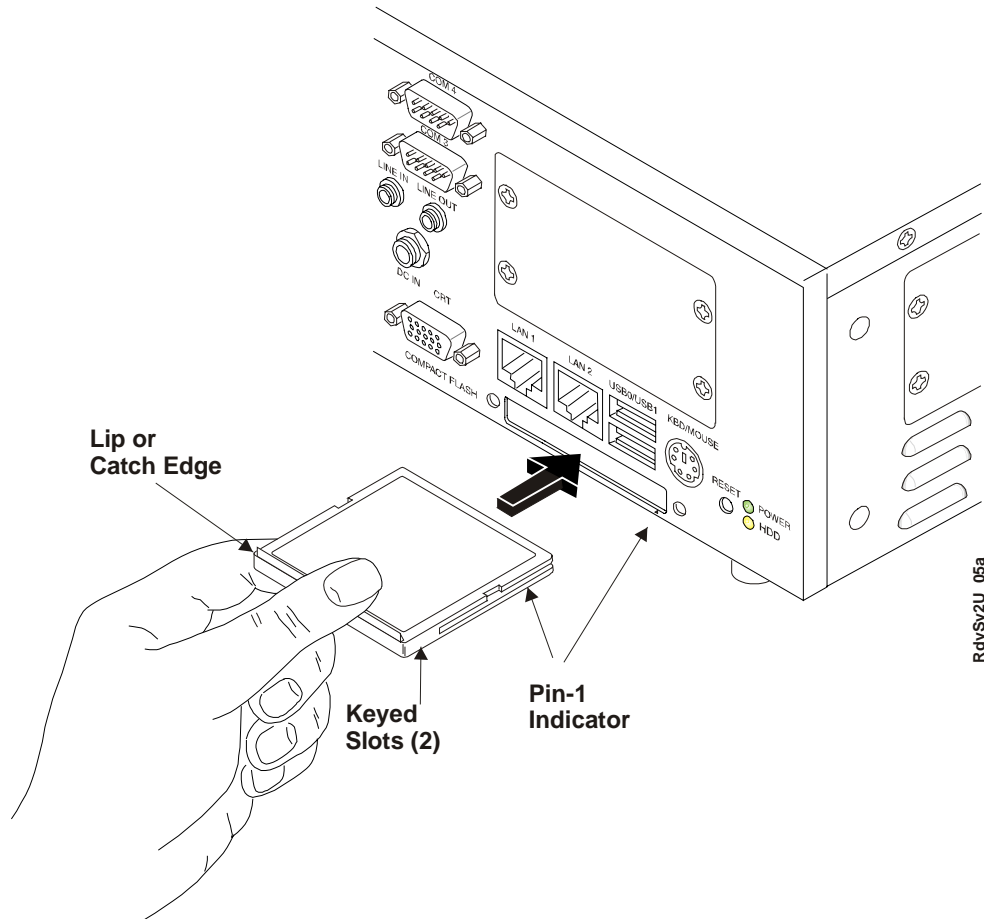


Figure 2-2. Installing the Compact Flash Card

9. If your application or environment requires protection of the compact flash card, for security or EMI protection, you can re-install the protective cover over the compact flash card. See Figure 2-1. Reconnecting the protective cover will provide full EMI protection.
10. Refer to the specific ReadyBoard documentation for any required jumper settings for the compact flash card, before restoring power to the ReadySystem 2U.

CAUTION Depending on BIOS Setup, some ReadyBoard products will power on as soon as you connect DC power to the system.

Removing the Compact Flash Card

To remove the compact flash card from the ReadySystem 2U through the enclosure opening, simply reverse the installation procedure and follow all of the safety precautions listed.

ReadySystem 2U Disassembly/Re-Assembly

Accessing the bottom of the ReadyBoard, where the SODIMM memory is installed, requires removing the ReadyBoard from the ReadySystem 2U enclosure. The following procedures described how to remove and re-install the ReadyBoard into the ReadySystem 2U enclosure.

NOTE	Some of the cables or components, including the ReadyBoard, may not be shown in the following figures to simplify the figure and improve clarity.
-------------	---

Tools Required

Use these tools to install and remove the ReadyBoard into or out of the ReadySystem enclosure.

- Small to medium Phillips #2 screwdriver
- Anti-static service kit - Use a complete anti-static service kit (or the equivalent) to remove or install the ReadyBoard. A complete anti-static service kit should include a static-dissipating work surface, a chassis clip lead, and a wrist or ankle strap.

Removing the ReadyBoard from Enclosure

1. Prepare the ReadySystem 2U for the ReadyBoard removal.
 - ◆ If the ReadySystem is already prepared for ReadyBoard removal, with the top cover removed, power turned off, and the coaxial power cable disconnected, skip to Step 9.
 - ◆ If the ReadySystem has power applied and operating, continue with the next step.

CAUTION	To prevent damage to the ReadyBoard, ensure the power switch on the ReadySystem is turned off and the coaxial power cable has been disconnected.
----------------	--

2. Initiate a shut down sequence through the OS, or hold in the power switch for 4-6 seconds to turn power off.

The Power LED should turn off completely when the power is off.


3. Disconnect the coaxial power cable from the DC IN connector of the I/O panel.

CAUTION	To prevent damage to the static sensitive components on the ReadyBoard, ensure you follow good Electrostatic Discharge principles. Components on the ReadyBoard are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling the ReadyBoard:
----------------	--

Always use a anti-static wrist/ankle strap and a grounding mat.

Before you handle the ReadyBoard, touch a grounded, unpainted metal surface to discharge any static electricity.

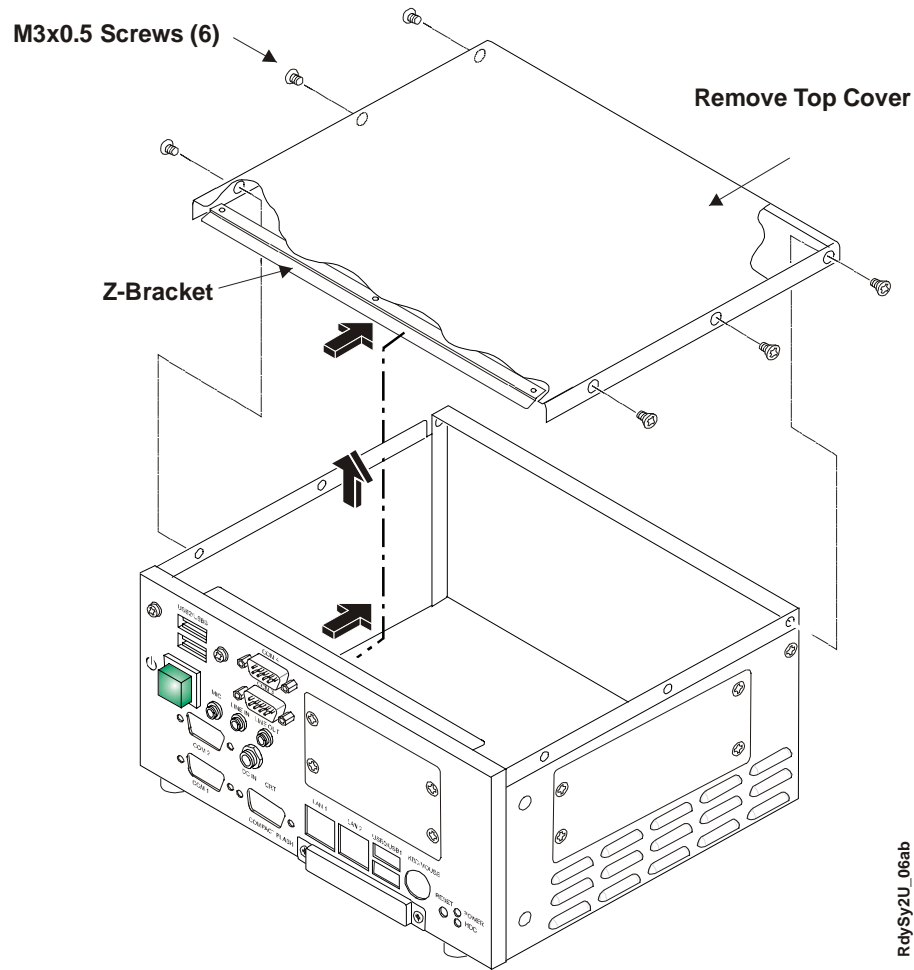4. Remove the top cover from the ReadySystem enclosure. See Figure 2-3.
 - a. Remove the six screws from the enclosure.
 - b. Slide the top cover to the rear.
 - c. Lift the top cover up and away from the enclosure.
 - d. Set aside the top cover for later re-installation.



RdySy2U_06ab

Figure 2-3. Removing ReadySystem Top Cover

5. Locate the five screws securing the rear panel to the enclosure. See Figure 2-4.
6. Turn the ReadySystem over on its top and remove the three screws securing the rear panel at the bottom of the enclosure.
7. Turn the enclosure upright and remove the remaining two screws securing the rear panel at the top of the enclosure.

NOTE

Ampro recommends removing the rear panel for better access to the standoffs inside ReadySystem, simplifying ReadyBoard installation and removal.

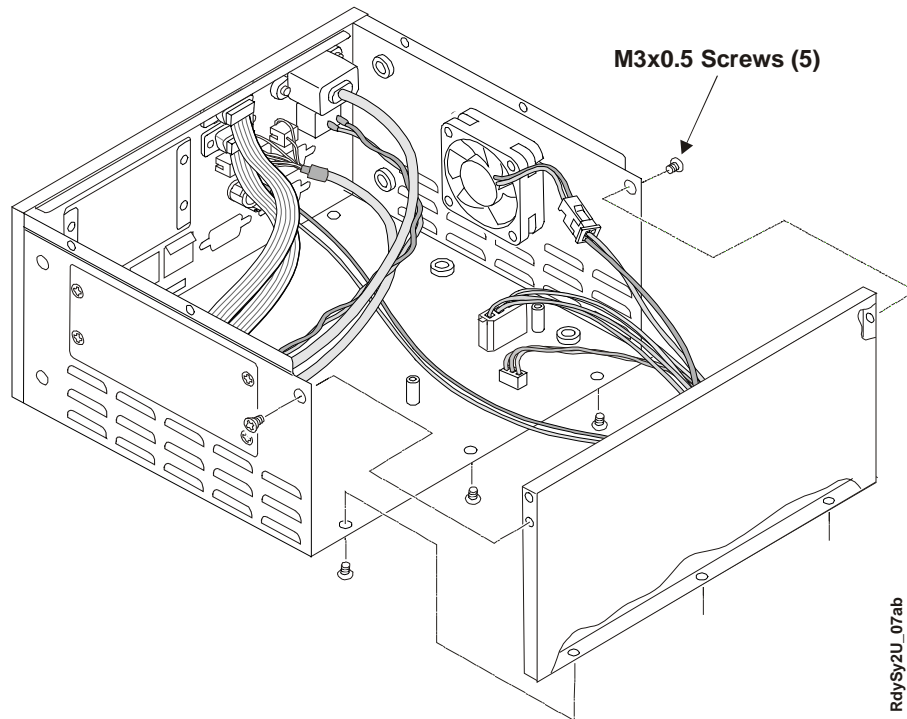


Figure 2-4. Removing ReadySystem Rear Panel

8. Tilt the rear panel away from the enclosure.
9. Disconnect all cables from the ReadyBoard, at the ReadyBoard (including Enclosure Fan and DC IN from +5V Regulator board) before continuing. See Figures 2-4, 2-5 and 2-7.

Refer to the respective ReadyBoard documentation for more information.

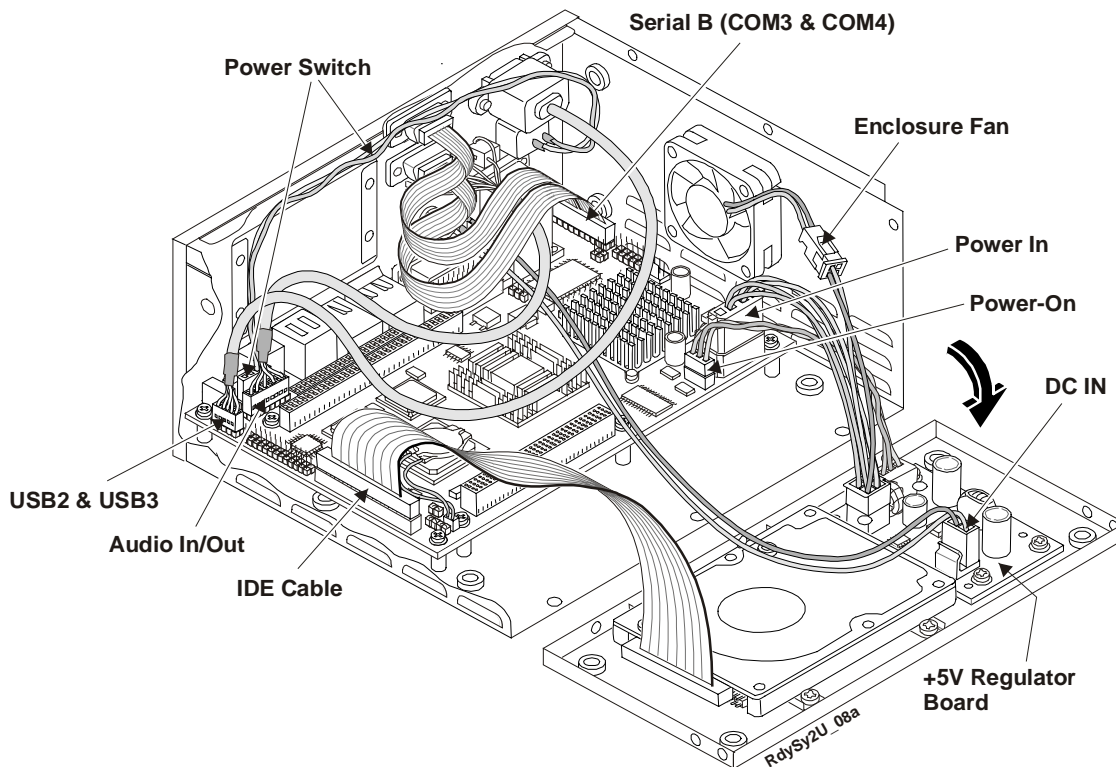


Figure 2-5. Disconnecting the Cables

10. Remove all screws (8) holding the ReadyBoard to the enclosure standoffs. See Figure 2-6.
If there are PC/104 expansion board(s) connected to the ReadyBoard, you will need to disconnect and remove the PC/104 boards from the ReadyBoard before removing it from the enclosure. Refer to the respective manuals for the PC/104 expansion boards to disconnect and remove these PC/104 boards.
11. Once you have removed all of the screws (and PC/104 boards), gently lift the rear of the ReadyBoard (the edge opposite the I/O panel) while pulling away from the panel to free the board's connectors and place it on a protective surface. See note on page 15.

Notes: If there are PC/104 modules to remove, there are four standoffs for each board. 0.8"/20 mm standoffs (4) are used for first PC/104 board and 0.6"/15 mm standoffs (4) are used above the first board.

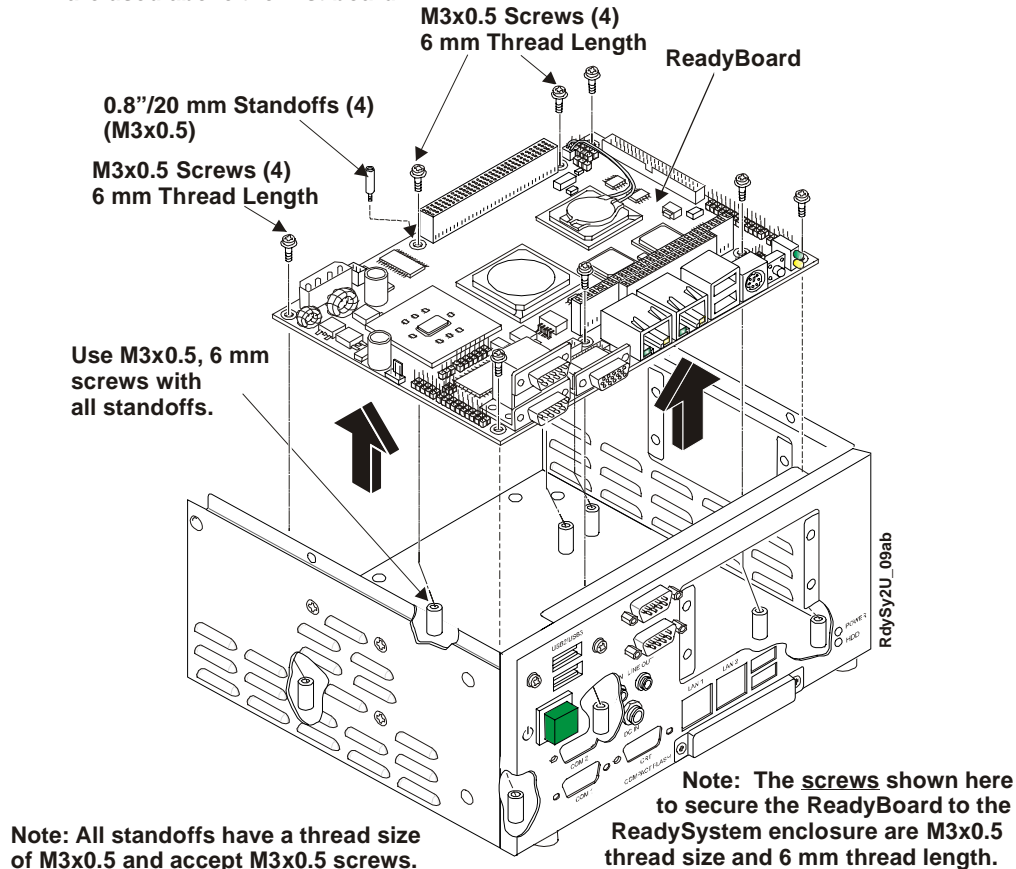


Figure 2-6. Removing ReadyBoard from Enclosure

Installing the ReadyBoard into the Enclosure

1. Prepare the ReadySystem for the ReadyBoard installation.
 - ◆ If the ReadySystem is already prepared for ReadyBoard installation with the top cover removed and the coaxial power cable disconnected, skip to Step 9.
This includes installing the correct size SODIMM onto the ReadyBoard, since you will not have access to the SODIMM socket once the ReadyBoard is installed into the ReadySystem.
 - ◆ If the ReadySystem is not ready for the ReadyBoard installation, continue with the next step.

CAUTION To prevent damage to the ReadyBoard, ensure the coaxial power cable has been disconnected from the DC IN connector of the I/O panel and the DC power source has been disconnected from AC power.

2. Disconnect the coaxial power cable from the DC IN connector of the I/O panel.

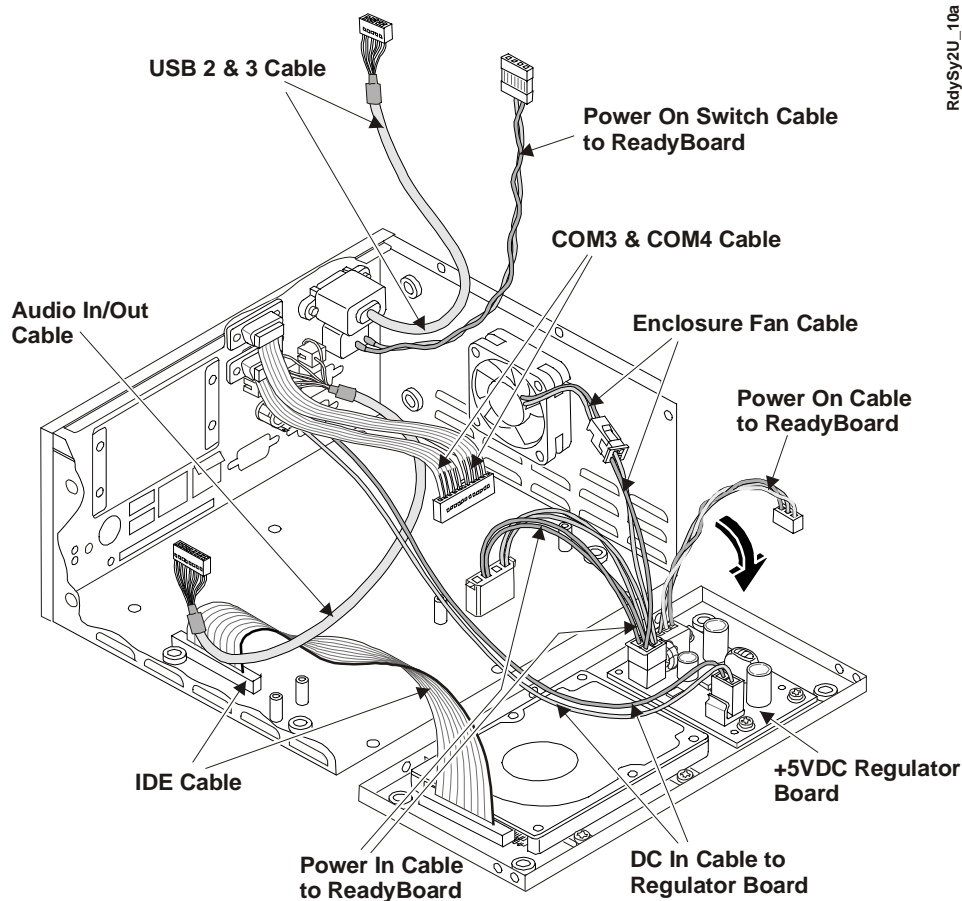
CAUTION To prevent damage to the top cover after removing the six screws, you must slide the top cover to the rear before lifting the top cover off the enclosure, due to the Z-bracket lip.

3. Remove any of the screws still holding the top cover to the ReadySystem. See Figure 2-3.
4. Slide the top cover to the rear, then lift it up and away from the ReadySystem, setting it aside for later re-installation.
5. Locate the five screws securing the rear panel to the enclosure. See Figure 2-4.
6. Turn the ReadySystem over on its top and remove the three screws securing the rear panel at the bottom of the enclosure.
7. Turn the enclosure upright and remove the remaining two screws securing the rear panel at the top of the enclosure.

NOTE Ampro recommends removing the rear panel for better access to the standoffs inside ReadySystem, simplifying ReadyBoard installation.

8. Tilt the rear panel away from the enclosure. See Figure 2-7.

NOTE You might find it easier to install the hard-to-get cables on the ReadyBoard before installing the board into the enclosure. If so, go to the procedure for *Connecting the Remaining Cables* and connect the first three cables mentioned before continuing.



RdySy2U_10a

Figure 2-7. Internal Cables Shown Separated

9. Move the internal cables out of the way to allow installation of the ReadyBoard. See Figure 2-5.
 - ◆ If necessary, to gain greater access to the internal space of the ReadySystem, disconnect any cables between the +5 volt regulator and the internal parts of the ReadySystem. See Figure 2-7.
 - ◆ Ampro recommends disconnecting enough cables to allow laying the rear panel down flat on a flat surface, which will allow a problem free ReadyBoard installation.
10. Remove the rear panel far enough from the enclosure to lay it flat, allowing better access to the internal parts of the ReadySystem.

CAUTION

To prevent damage to the static sensitive components on the ReadyBoard, ensure you follow good Electrostatic Discharge principles. Components on the ReadyBoard are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling the ReadyBoard:

Always use an anti-static wrist/ankle strap and a grounding mat.

Before you handle the ReadyBoard, touch a grounded, unpainted metal surface to discharge any static electricity.

11. Ensure you have installed the required SODIMM memory onto the ReadyBoard before continuing.

Once the ReadyBoard is installed into the ReadySystem, you will not be able to access the SODIMM socket on the ReadyBoard.

12. Position the ReadyBoard near the eight standoffs on the enclosure base at about a 10° angle to the mounting surface. See Figures 2-8 and 2-9.
13. Insert the ReadyBoard and its LAN connectors just under the lip of the LAN port on the enclosure wall, behind the I/O panel. See Figure 2-8.
14. Slowly work the ReadyBoard into place, inserting the I/O connectors and LEDs into the respective openings on the I/O Panel.

When you have the ReadyBoard in position you should clearly see the mounting holes for the eight standoffs under the board mounting holes, and the LEDs should fit into the openings provided on the I/O Panel.

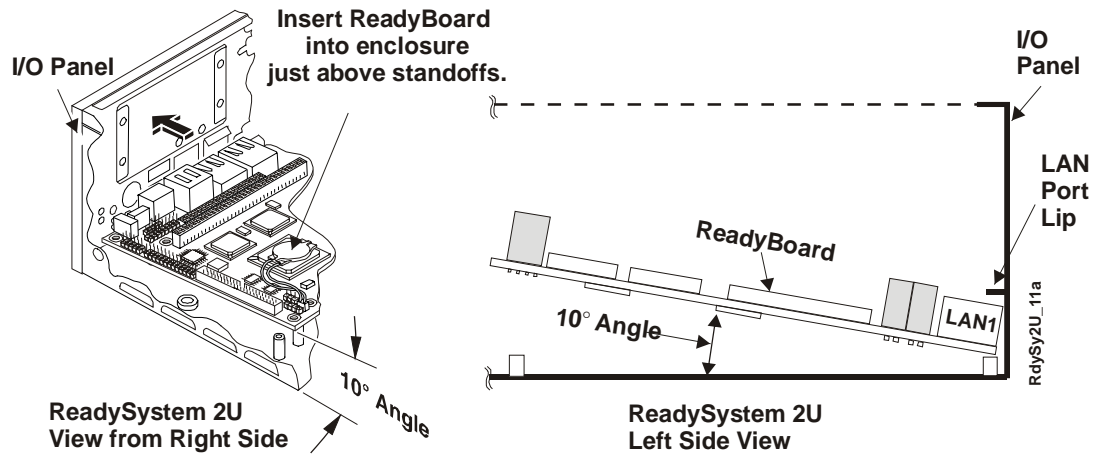


Figure 2-8. ReadyBoard Positioned Under LAN Ports

Notes: If there are PC/104 modules to remove, there are four standoffs for each board. 0.8"/20 mm standoffs (4) are used for first PC/104 board and 0.6"/15 mm standoffs (4) are used above the first board.

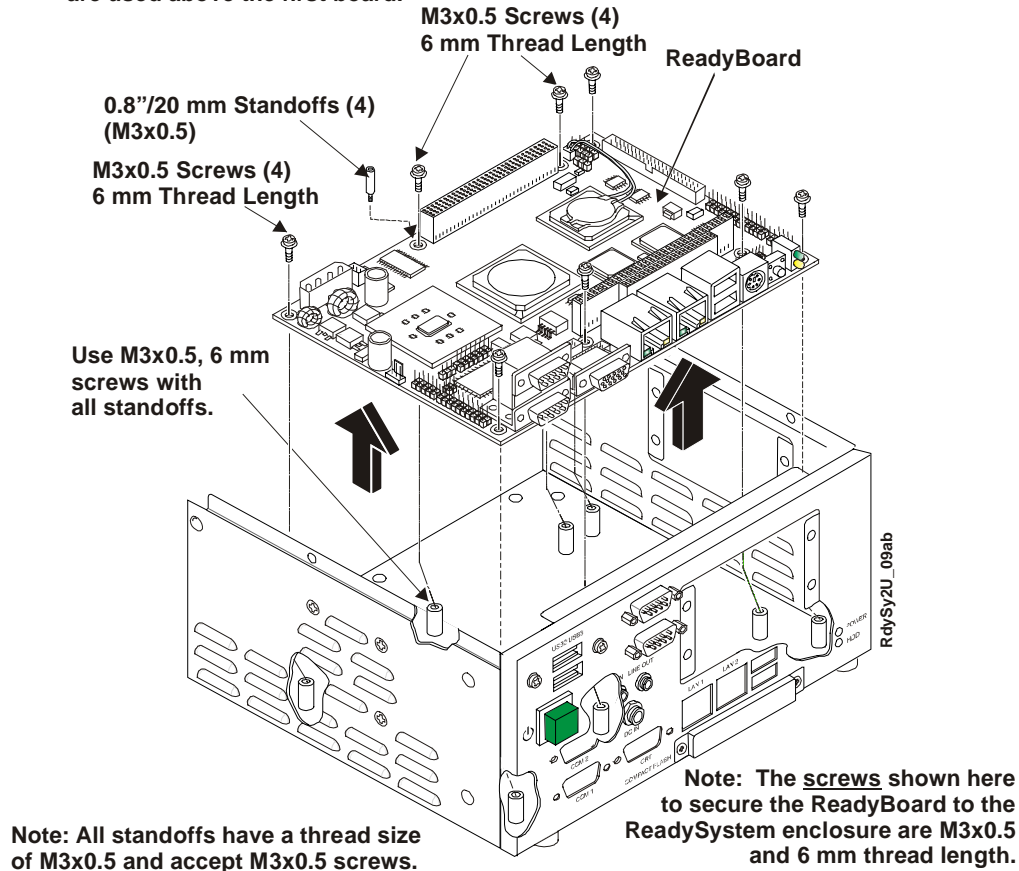


Figure 2-9. Installing ReadyBoard into Enclosure

15. Insert four M3x0.5, 6 mm screws with washers into the standoffs on the floor of the enclosure at the four corners of the board. See Figure 2-9.
16. If you are putting PC/104 expansion board(s) onto the ReadyBoard, insert the four 0.8" (20 mm) standoffs provided with the ReadyBoard at the four PC/104 mounting locations. See Figure 2-9.
 - ◆ Insert four M3x0.5, 6 mm screws with washers at the four PC/104 mounting locations on the first expansion board, if you are not installing a second PC/104 expansion board. See Figure 2-9.
 - ◆ If you are putting a second PC/104 expansion board onto the ReadyBoard, insert the four 0.6" (15 mm) standoffs on the first PC/104 expansion board provided with the expansion board at the four PC/104 mounting locations. See Figure 2-9.
 - ◆ Insert four M3x0.5, 6 mm screws with washers at the four PC/104 mounting locations on the top expansion board.
17. If you are not putting any PC/104 board(s) onto the ReadyBoard, insert four M3x0.5, 6 mm screws with washers at the four PC/104 mounting locations on the ReadyBoard. See Figure 2-9.
18. Go to the next procedure to connect the cables.

Connecting the Power Cables

When connecting the cables refer to the pin-1 designations shown in Figure 2-11. Pin-1 is shown as a black pin (round or square) at the connectors and jumpers, unless otherwise noted. If you desire more installation information than is provided in this guide refer to the ReadyBoard model QuickStart Guide.

NOTE The connector reference designators in the text and illustrations are based on the ReadyBoard 700 and may be different from your respective ReadyBoard product, but the functions will be the same and the connector location will typically be in the same area.

1. Connect the Power Switch (two-wire) cable to the Utility connector (pins 1 & 2 on J18) on the ReadyBoard, matching the red wire with pin-1. See Figures 2-10, 2-11 and 2-12.

The Utility connector placement differs slightly on the various ReadyBoards, but all Utility connectors use a 5-pin header and are in the general area shown in Figure 2-11. Refer to the respective ReadyBoard documentation for any variations, but match the red wire with pin-1.

2. Connect the Power In cable to the Power In connector (J4). See Figures 2-10, 2-11 and 2-12.

The Power In connectors are located in the same place on all boards and use a 4-pin header.

3. Connect the Power On cable to the Power On connector (J6) on the ReadyBoard, as shown in Figure 2-12. See Figures 2-10 and 2-11.

The Power On (3-pin) connector placement differs slightly on the various ReadyBoards. Refer to the respective ReadyBoard documentation for any variations.

4. Connect the DC In cable to the +5 volt Regulator board. See Figure 2-12.

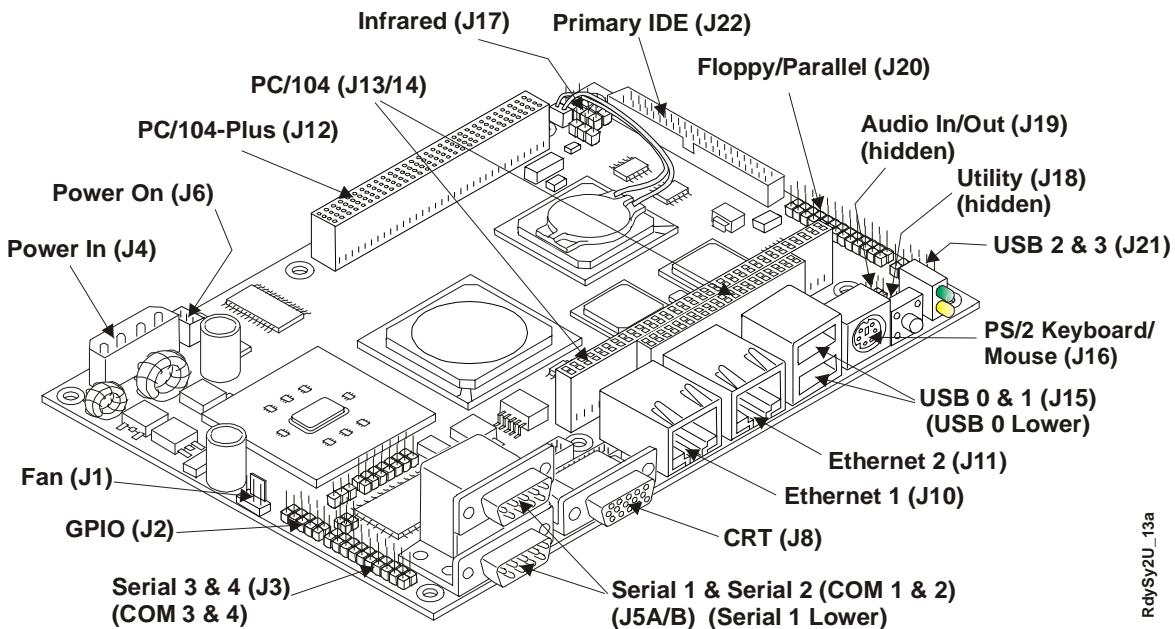


Figure 2-10. Connector Locations (Typical ReadyBoard)

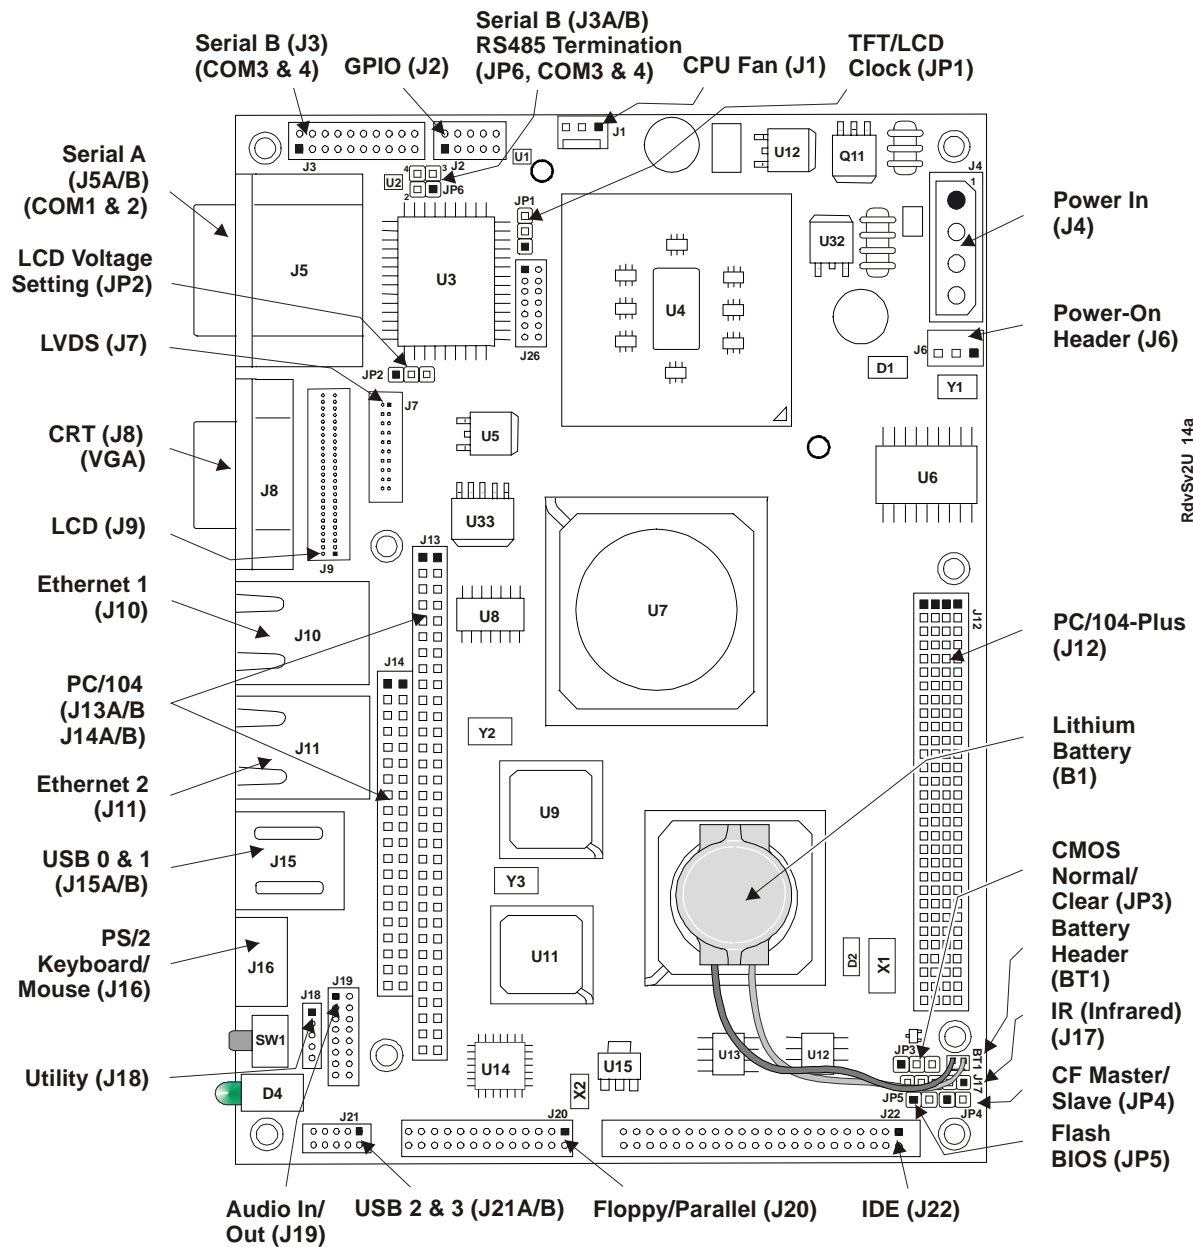


Figure 2-11. Connector and Jumper Pin-1 Locations (Typical ReadyBoard)

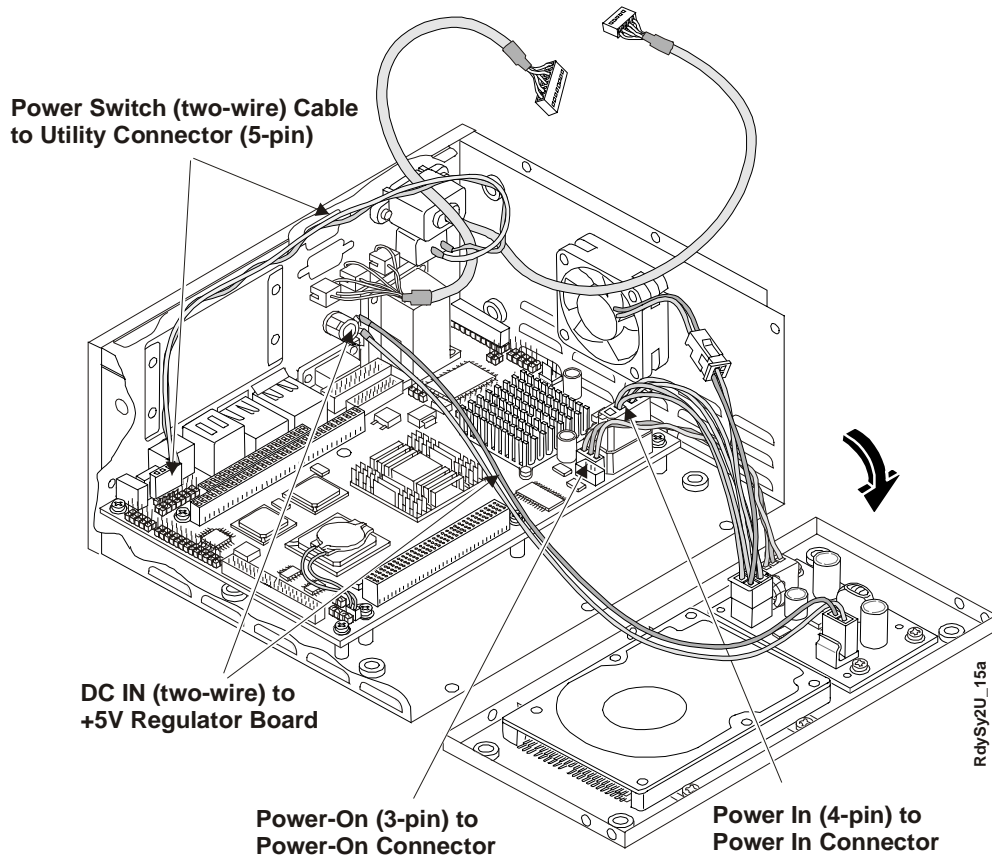


Figure 2-12. Installing Power Cables

Connecting the Remaining Cables

The following procedure describes how to install the remaining cables to the ReadyBoard. Refer also to the respective ReadyBoard documentation for any variations to board shown in the example figures when connecting the cables to the ReadyBoard. Skip any cable(s) that do not apply to your situation.

NOTE Ampro recommends using the cable routing shown in the figures. This will help to ensure cables and wiring do not come in contact with the heatsinks.

1. Connect the COM3 & COM4 cables to the Serial B connector (J3) on the ReadyBoard, as shown in Figure 2-13. See Figures 2-10, 2-11 and 2-13.

The Serial B connectors (COM3 & COM4) use the same 20-pin header along the edge of the board. Refer to the respective ReadyBoard documentation for the pin-1 location on the board.

The COM3 cable is always connected to pins 1-10 on the 20-pin connector and COM4 is always connected to pins 11-20 on the 20-pin connector, regardless of the ReadyBoard model. This 20-pin connector has odd/even pin arrangement where all odd pins of the connector are on one side, while all even pins are on the opposite side of the connector.

2. Connect the USB2 & USB3 cable to the USB2 & USB3 (10-pin) connector (J21) on the respective ReadyBoard. See Figure 2-13.

The USB2 & USB3 connectors use the same cable and 10-pin header. Refer to the respective ReadyBoard documentation for the pin-1 location.

3. Connect the Audio cable to the Audio In/Out (16-pin) connector on the respective ReadyBoard. See Figure 2-13.

The Audio In/Out (16-pin) connector placement differs slightly on the various ReadyBoards, but is in the same general area on the board. Refer to the respective ReadyBoard documentation for any variations and the pin-1 location.

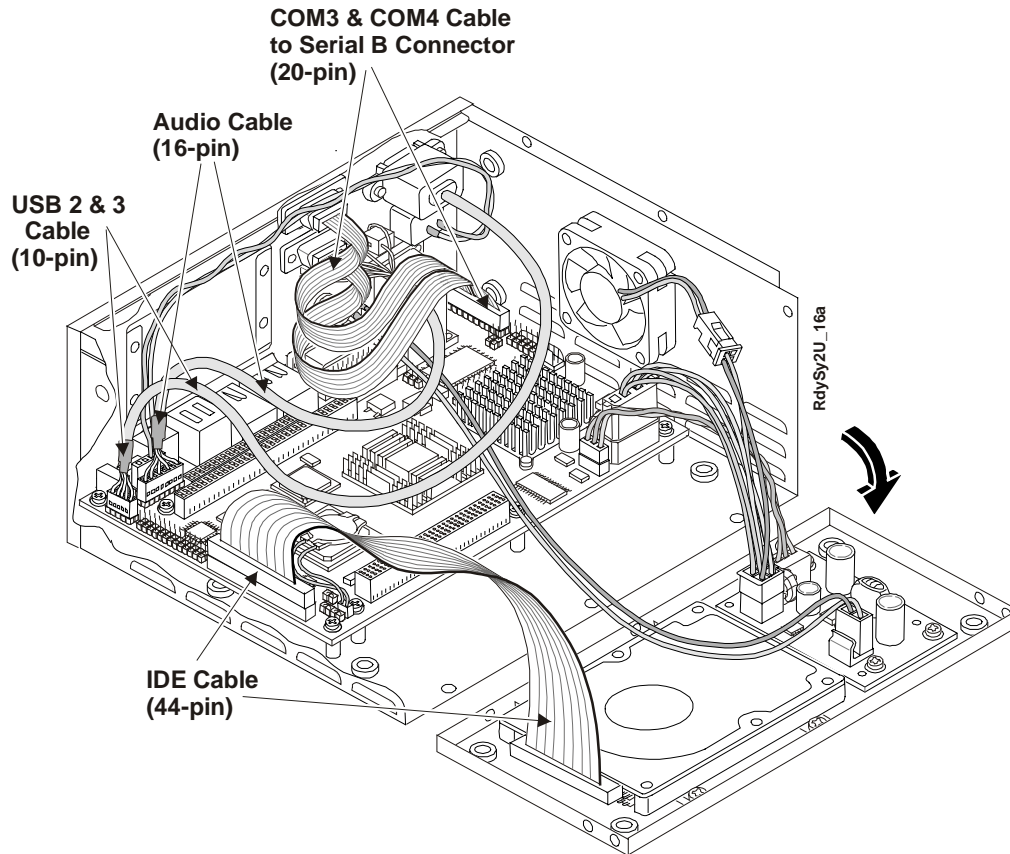


Figure 2-13. Installing Audio, USB, and COM Cables

4. Connect the IDE cable to the IDE connector (J22). See Figures 2-10, 2-11 and 2-13.
 - ◆ If you did not disconnect the IDE cable from the hard disk drive earlier, just connect the free end of the IDE cable to the IDE connector (J22) on the ReadyBoard.
 - ◆ If you also disconnected the IDE cable from the hard disk drive (HDD) earlier, then connect it to the IDE connector on the HDD. The red strip on the cable should match with pin-1 on the HDD and is typically located next to the jumper settings on the HDD. See Figure 2-13.
5. You may replace the top cover before restoring power to check the ReadySystem 2U operation, or restore power to check system operation before replacing the top cover to the enclosure.

In either case, observe all safety precautions when replacing the top cover or restoring power to the system.
6. Follow the power on procedures outlined in Chapter 1 to restore power to the ReadySystem.

CAUTION	Depending on BIOS Setup, some ReadyBoard products will power on as soon as you connect live DC power to the system.
----------------	---

Memory Installation

The ReadyBoard model uses a single SODIMM socket available on the underside of the board. The ReadyBoard SBC must be removed from the ReadySystem 2U enclosure to remove or install the single SODIMM.

NOTE	Refer to the specific ReadyBoard model documentation or Reference Manual for SODIMM installation recommendations.
-------------	---

Tools Required

Use an anti-static service kit (or the equivalent) to remove or install the SODIMM. An anti-static service kit should include a static-dissipating work surface, a chassis clip lead, and a wrist or ankle strap.

Installation Guidelines

- When handling a SODIMM, observe anti-static discharge precautions to avoid damage.
- Refer to the specific ReadyBoard model documentation or Reference Manual for SODIMM installation recommendations.
- The typical SODIMM sizes are available from Ampro: 64 MB, 128 MB, 256 MB, 512 MB, or 1 GB, depending on the supported memory size of the ReadyBoard model.
- The supported SODIMM memory size is ReadyBoard model specific.

Removing the SODIMM

Use this procedure to remove the SODIMM from the SODIMM socket on the ReadyBoard.

1. Prepare the ReadySystem 2U for SODIMM removal:
 - ◆ If the ReadySystem is already prepared for SODIMM removal, with the ReadyBoard removed from the ReadySystem enclosure, skip to Step 7.
 - ◆ If the ReadySystem has power applied and operating, continue with the next step.

CAUTION	To prevent damage to the ReadyBoard, ensure the power switch on the ReadySystem is turned off and the coaxial power cable has been disconnected from the DC IN connector.
----------------	---

2. Initiate a shut-down sequence through the OS, or hold in the power switch for 4-6 seconds to turn off the power.

The Power LED should turn off completely when the power is off.
3. Disconnect the coaxial power cable from the DC IN connector.
4. Remove the six screws holding the top cover to the ReadySystem enclosure and then slide the cover to the rear as shown in the Figure 2-3.
5. Disconnect the cables to the ReadyBoard model and lay the free ends out of the way.
6. Remove the ReadyBoard model from the ReadySystem enclosure and place on anti-static surface.

Refer to *Removing ReadyBoard from Enclosure* for more information.
7. Turn over the ReadyBoard model for access to the bottom of the board while laying it on a flat anti-static surface. See Figure 2-14.

CAUTION To prevent damage to the SODIMM, do not touch the SODIMM until you have discharged yourself and followed good Electrostatic Discharge principals. The SODIMMs are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling a SODIMM:

Use an anti-static wrist/ankle strap and a grounding mat connected to ground.

Leave the SODIMM in the anti-static bag until you are ready to install it.

Before you touch the SODIMM, touch a grounded, unpainted metal surface to discharge any static electricity.

8. Locate the SODIMM socket (DIMM1) on the bottom of the ReadyBoard model. See Figure 2-14.
9. Open both retaining latches to release the SODIMM from the socket. See Figure 2-14.
The SODIMM will spring up to a 45° angle once you open both retaining latches. If the SODIMM does not spring up to a 45° angle, then the retaining latches have not released the SODIMM from the socket.
10. Using the card edges, lift the SODIMM completely away from the socket. See Figure 2-14.
11. Place the SODIMM on an anti-static surface or in an anti-static bag.

NOTE If you remove the SODIMM and restore power without a SODIMM installed, you will not see a display, and your system will not work properly.

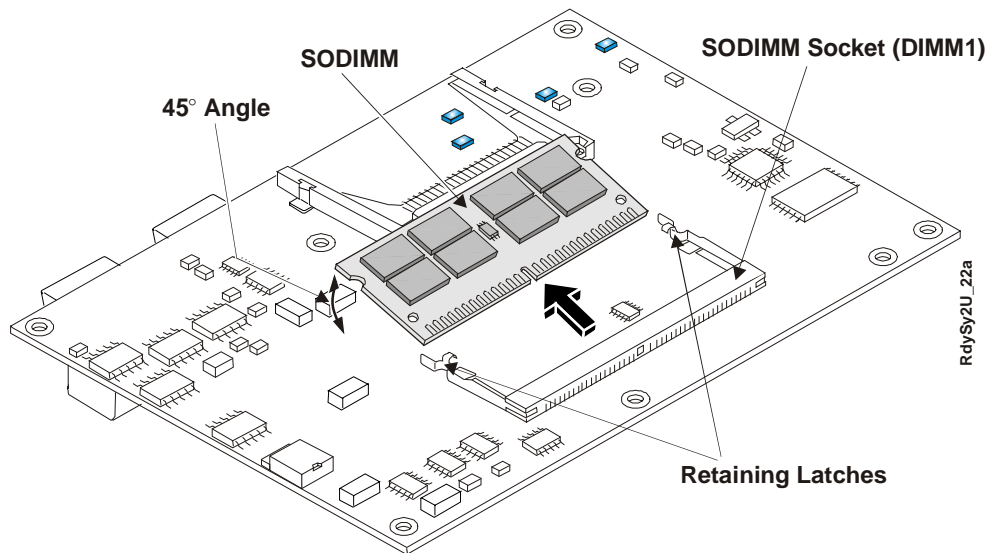


Figure 2-14. Removing SODIMM from Socket

Installing the SODIMM

If you want to install a larger size SODIMM or replace the existing SODIMM, refer to the following procedure.

1. Prepare the ReadySystem 2U for SODIMM installation:
 - ◆ If the ReadySystem is already prepared for SODIMM installation, with the ReadyBoard removed from the Ready System enclosure, skip to Step 7. If the SODIMM socket is empty, skip to Step 9.
 - ◆ If the ReadySystem has power applied and operating, continue with next step.

CAUTION	To prevent damage to the ReadyBoard, ensure the power switch on the ReadySystem is turned off and the coaxial power cable has been disconnected from the DC IN connector.
----------------	---

2. Initiate a shut down sequence through the OS, or hold in the power switch for 4-6 seconds to turn off power.

The Power LED should turn off completely when the power is turned off.

CAUTION	To prevent damage to the SODIMM, do not touch the SODIMM until you have discharged yourself and followed good Electrostatic Discharge principals. The SODIMMs are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling a SODIMM: Use an anti-static wrist/ankle strap and a grounding mat connected to ground. Leave the SODIMM in the anti-static bag until you are ready to install it. Before you remove the SODIMM from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.
----------------	--

3. Disconnect the coaxial power cable from the DC IN connector.
4. Remove the six screws holding the top cover to the ReadySystem enclosure and then slide the cover to the rear as shown in Figure 2-3.
5. Disconnect the cables to the ReadyBoard model and lay the free ends out of the way.
6. Remove the ReadyBoard model from the ReadySystem enclosure and place on anti-static surface. Refer to the previous procedures for more information.
7. Turn over the ReadyBoard model for access to the bottom of the board while laying on a flat anti-static surface. See Figure 2-15.
8. If you need to remove the existing SODIMM from the SODIMM socket before continuing, refer to the previous procedure, *Removing the SODIMM*, beginning with Step 9.

Follow Steps 9 to 11 in *Removing the SODIMM*, before continuing with this procedure.
9. Remove the SODIMM from its protective bag, handling the SODIMM by its edges.

NOTE	Refer to the specific ReadyBoard model documentation or Reference Manual for SODIMM installation recommendations.
-------------	---

10. Ensure there is nothing in the SODIMM socket that would prevent its installation.

11. Insert the SODIMM into the socket at a 45° angle to the bottom of the ReadyBoard with the components facing up. See Figure 2-15.

The SODIMM card edge and socket are keyed to install into the socket in only one direction.

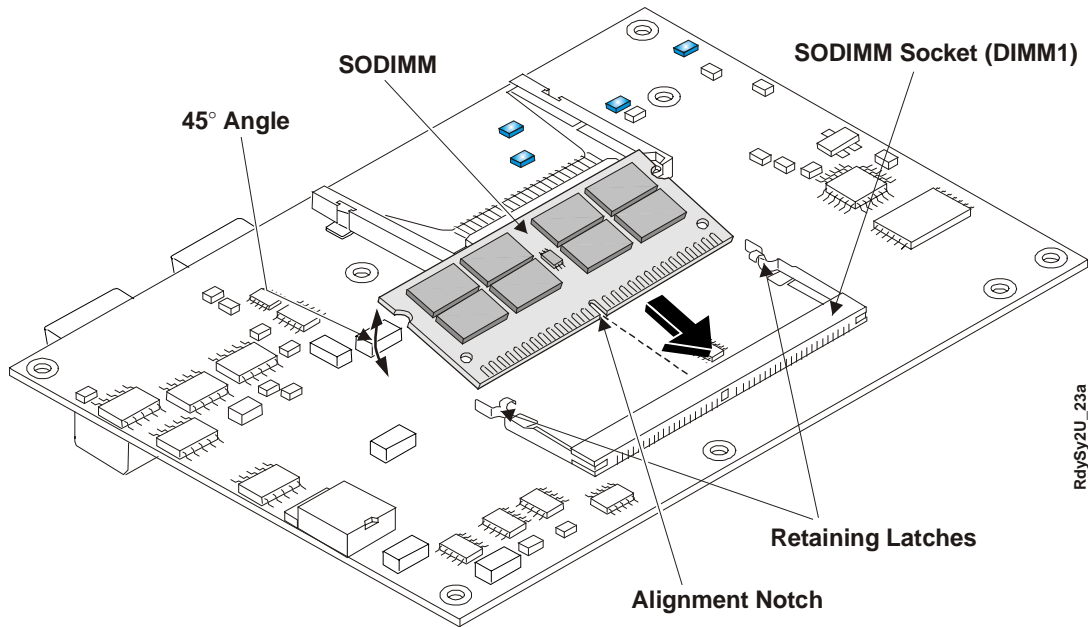


Figure 2-15. Installing SODIMM into Socket

12. Press the edges of the SODIMM down between the latches, until the latches snap into place. See Figure 2-15.
The latches should open to accept the SODIMM without any resistance. If you encounter any resistance, you may not have inserted the SODIMM far enough into the socket.
13. If the retaining latches do not close completely on the SODIMM, remove it and repeat Steps 10 to 12.
14. Reinstall the ReadyBoard model into the ReadySystem 2U enclosure.
Refer to the *Installing the ReadyBoard* procedure for more information.
15. Reconnect the cables to the ReadyBoard model.
Refer to the *Connecting the Cables* procedure for more information.
16. Restore power to the ReadySystem and observe the boot screen for new memory recognition.
If the system does not boot or there is a problem recognizing the new memory, the new SODIMM could be defective or the SODIMM was not properly installed or recognized.

CAUTION	Depending on BIOS Setup, some ReadyBoard products will power on as soon as you connect DC power to the system.
----------------	--

Ampro Computers, Inc. provides a number of methods for contacting Technical Support listed in the Table A-1 below. Requests for support through the Virtual Technician are given the highest priority, and usually will be addressed within one working day.

- Ampro Virtual Technician – This is a comprehensive support center designed to meet all your technical needs. This service is free and available 24 hours a day through the Ampro web site at <http://ampro.custhelp.com>. This includes a searchable database of Frequently Asked Questions, which will help you with the common information requested by most customers. This is a good source of information to look at first for your technical solutions. However, you must register online before you can login to access this service.
- Personal Assistance – You may also request personal assistance by going to the "Ask a Question" area in the Virtual Technician. Requests can be submitted 24 hours a day, 7 days a week. You will receive immediate confirmation that your request has been entered. Once you have submitted your request, you must log in to the "My Stuff" where you can check status, update your request, and access other features.
- Embedded Design Resource Center – This service is also free and available 24 hours a day at the Ampro web site at <http://www.ampro.com>. However, you must be registered online before you can log in to access this service.

The Embedded Design Resource Center was created as a resource for embedded system developers to share Ampro's knowledge, insight, and expertise gained from years of experience. This page contains links to White Papers, Specifications, and additional technical information.

Table A-1. Technical Support Contact Information

Method	Contact Information
Virtual Technician	http://ampro.custhelp.com
Web Site	http://www.ampro.com
Standard Mail	Ampro Computers, Incorporated 5215 Hellyer Avenue San Jose, CA 95138-1007, USA

This system overview presents general information about the ReadySystem 2U enclosure (ReadyBox 2U) and the EPIC Architecture. After reading this chapter you should understand:

- EPIC architecture
- ReadyBox 2U features, including I/O panel features and connectors
- ReadyBox 2U specifications
- ReadyBox 2U mounting dimensions

EPIC Architecture

In 2004, five companies collaborated to fill the void between the EBX size and the PC/104 size with a new industry standard form factor (115 mm x 165 mm, or $\approx 4.5" \times 6.5"$) called "Embedded Platform for Industrial Computing (EPIC)." The EPIC standard principally defines physical size, mounting hole pattern, and power connector locations. It does not specify processor type or electrical characteristics. There are recommended connector placements for serial, parallel, Ethernet, graphics, and memory expansion, including an optional location for PC card (PCMCIA) expansion. This embedded single board computer (SBC) standard ensures that embedded system OEMs can standardize their designs and that embedded computing solutions can be designed into even more space constrained environments than ever before.

The EPIC standard boasts the same highly flexible and adaptable system expansion as EBX, easily allowing addition of modular functions such as USB 2.0, IEEE 1394 (Firewire), or wireless networking not usually contained in standard product offerings. The EBX system expansion is based on popular existing industry standards, PC/104™, PC/104-Plus™, and PCI-104™. PC/104 places the ISA bus on compact 3.6" x 3.8" SBCs with self-stacking capability. PC/104-Plus adds the power of a PCI bus to PC/104 while retaining the basic form-factor, but PCI-104 expansion cards only provide the PCI bus to the PC/104 form-factor. Using PC/104 expansion cards, an EPIC board can be easily adapted to meet a variety of embedded applications.

The EPIC standard also brings stability to the mid-sized embedded board market and offers OEMs assurance that a wide range of products will be available from multiple sources – now and in the future. The EPIC specification is freely available to all interested companies, and may be used without licenses or royalties. For further technical information on the EPIC standard, visit the web site at <http://www.epic-sbc.org>. See Figure B-1.

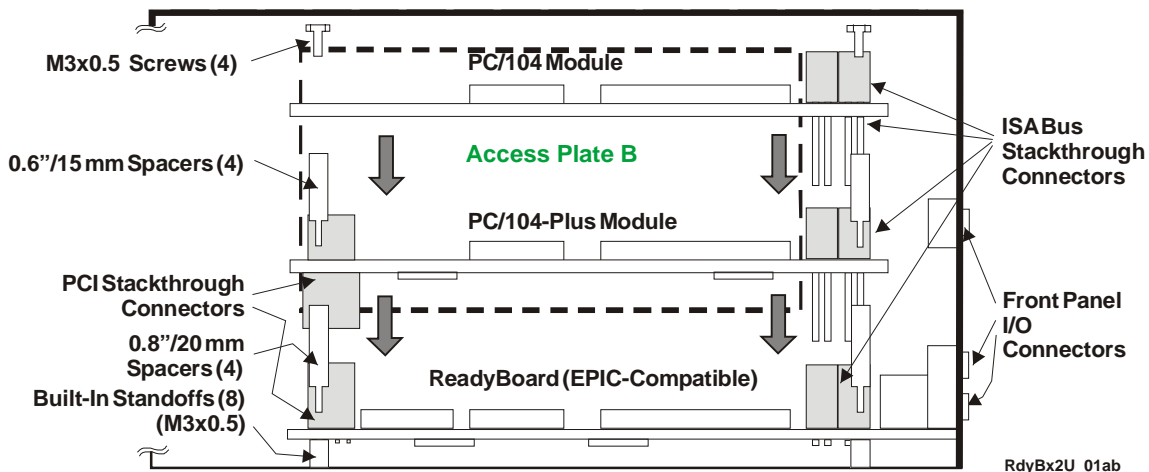


Figure B-1. Stacking PC/104 Modules in ReadyBox 2U (Side view)

Product Description

The ReadyBox 2U is a small enclosure (2U) for Ampro's ReadyBoard products and will accept any Ampro ReadyBoard SBC. Embedded systems using the ReadyBox 2U can be expanded through the PC/104, PC/104-Plus, or PCI-104 expansion connectors found on Ampro's ReadyBoard SBCs for additional system I/O. These expansion connectors offer compact, self-stacking, modular expandability.

The PC/104 connector is an embedded system version of the ISA bus signal set provided on desktop PCs. The PC/104-Plus includes the ISA bus signal set adding PCI signals to implement a PCI bus which is available on an additional 120-pin (4 rows of 30 pins) PCI expansion bus connector. This PCI bus makes use of the 120-pin connector and operates at clock speeds up to 33 MHz. The PCI-104 bus only carries the PCI signal set and is primarily used with PCI-104 compatible expansion boards. The PCI-104 bus can also be used with some PC/104-Plus boards, and with the help of a special ISA bus expansion adapter board (MiniModule ISA) can be used with PC/104 boards.

The ReadyBox 2U is particularly well suited to embedded applications and meets the size, power consumption, temperature range, quality, and reliability demands of many embedded systems.

ReadyBox 2U Features

- Compact size
- Quiet operation
- Compatibility with any Ampro ReadyBoard SBC
- ReadyBoard I/O modified to a single I/O panel
- Compatibility with up to two PC/104 expansion boards
- Easy access openings for PC/104 expansion board connectors or cabling
- Compatibility with any capacity 2 ½" Hard Disk Drive
- System Fan (Installed)
- Mechanical
 - ◆ Flexible mounting – wall or benchtop (surface)
 - ◆ Rack mounting (optional)
 - ◆ All cabling provided internally
- Certification
 - ◆ Designed for EMI standards
 - ◆ Designed for UL/CSA/CE approval (depends on the exact system assembled)
- Power
 - ◆ AC to DC power adapter (optional)
 - ◆ Power On/Off switch
 - ◆ DC power coaxial input connector

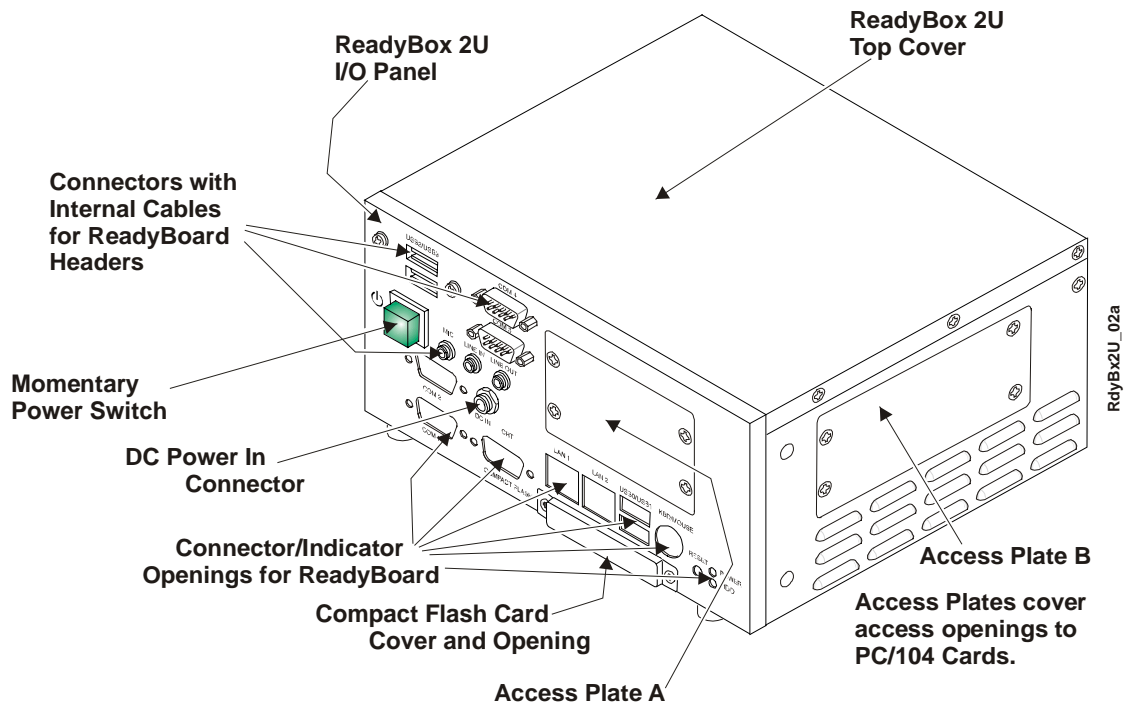


Figure B-2. ReadyBox 2U Enclosure (No ReadyBoard)

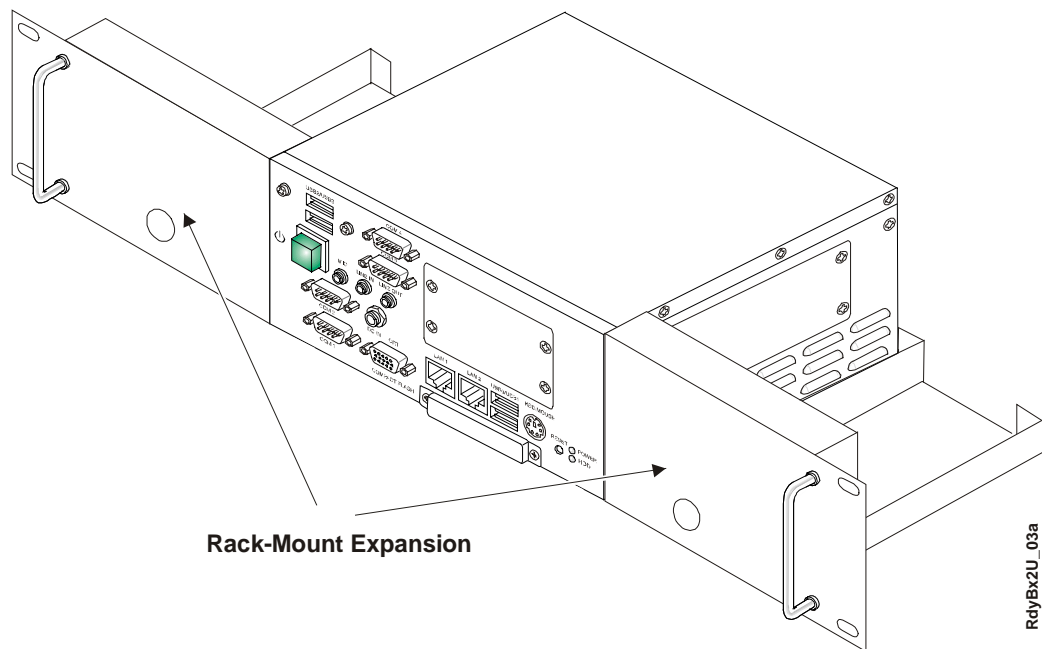


Figure B-3. ReadyBox 2U Enclosure with Optional Rack-Mount Hardware

I/O Panel Description

Table B-1 describes the connectors or controls on the I/O panel provided with the ReadyBox 2U shown in Figure B-4.

Table B-1. Installed Connectors or Controls

Control/Connector	Description
Power Switch	This momentary push button Power Switch controls DC power and has an internal cable and connector. The integrator must connect the 2-wire, 5-pin connector to the ReadyBoard at the Utility connector.
DC IN	This 2-pin coaxial connector is connected to the internal +5V regulator and accepts +12 VDC or +24VDC from an AC-to-DC converter (brick power supply)
Audio: MIC, Line In, Line Out	These two 3-pin connectors and one 2-pin connector (MIC) with respective cable are provided with the ReadyBox 2U. The integrator must connect the cable to the Audio In/Out connector on the ReadyBoard.
COM 3 & COM 4 (Serial 3 & Serial 4)	These two 9-pin connectors with the respective cables are provided with the ReadyBox 2U. The integrator must connect the cable to the ReadyBoard Serial B connector.
USB 2 & 3	These two 4-pin connectors with the respective cables are provided with the ReadyBox 2U. The integrator must connect the cable to the ReadyBoard USB header.
Compact Flash Cover and Slot	This compact flash cover and slot (not shown) protects the compact flash card if installed, and ensures good EMI shielding for the ReadyBox 2U.

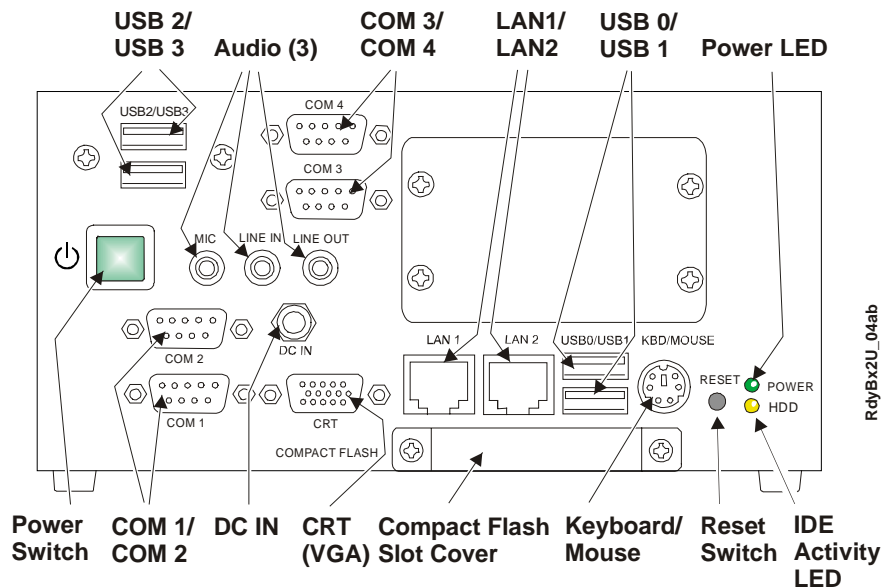


Figure B-4. I/O Panel Controls and Connectors (Front view)

Table B-2 describes the I/O panel openings for connector, control, or indicators provided with the ReadyBoard SBC shown in Figure B-5.

Table B-2. Connectors or Control/Indicator I/O Panel Openings

Access Opening	Description
Power-On LED	This power-on indicator is provided on the ReadyBoard.
HDD Activity LED	This IDE activity indicator shows when there is I/O activity for the IDE hard drive or compact flash card and is provided on the ReadyBoard.
Reset Switch	This reset switch is provided on the ReadyBoard. Pressing the Reset switch supplies a ground signal on the reset line causing a hard reset.
Keyboard/Mouse	This 6-pin single PS/2 Keyboard/Mouse connector is provided on the ReadyBoard. It requires a dual PS/2 output cable provided in the ReadyBoard SBC QuickStart kit.
USB 0 & 1	These two 4-pin USB type A connectors are provided on the ReadyBoard.
LAN 1 (Ethernet 1)	This 8-pin (RJ45) connector is provided on the ReadyBoard.
LAN 2 (Ethernet 2)	This 8-pin or 10-pin (RJ45) connector is provided on the ReadyBoard and is optional on certain models.
Video (CRT VGA)	This 15-pin (DB15) connector is provided on the ReadyBoard.
COM 1 & COM 2 (Serial 1 & Serial 2)	These two 9-pin (DB9) connectors are provided on the ReadyBoard.
Compact Flash Socket	The compact flash socket (not shown) is provided on the underside of the ReadyBoard and accepts the compact flash card, if installed, through the opening at the bottom of the I/O panel of the ReadyBox 2U.

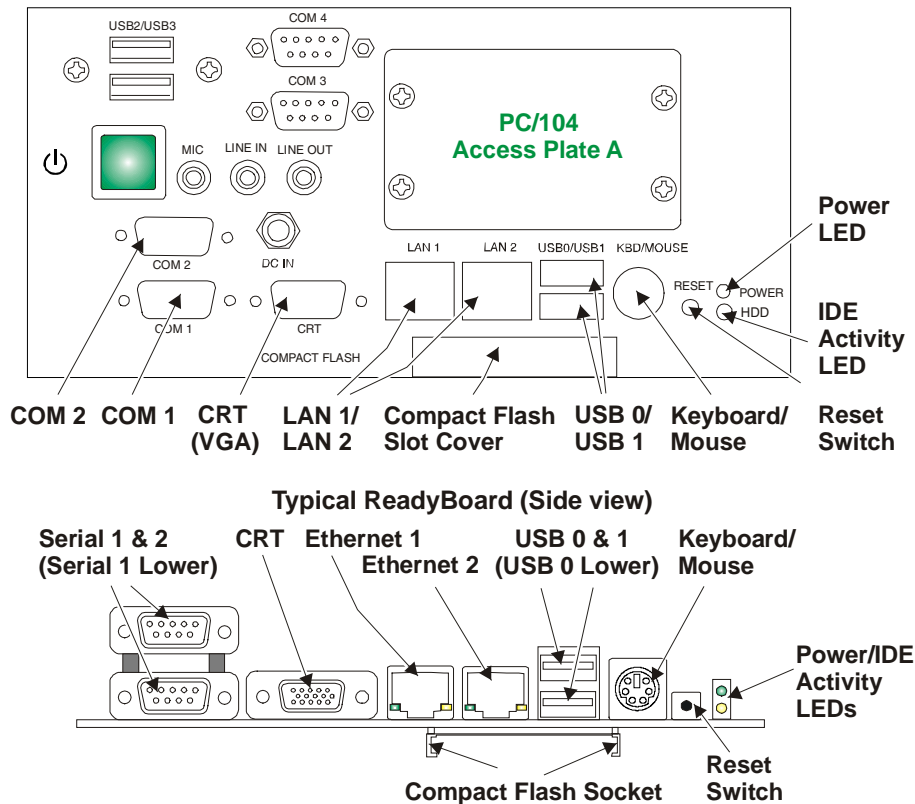


Figure B-5. I/O Panel Access Openings (Front view)

Power/IDE LED Definitions

Table B-3 provides the LED colors and definitions for the Power and IDE drive activity LEDs that are part of the installed ReadyBoard. See Figure B-4. Refer to the specific ReadyBoard SBC for the Ethernet LED activity.

Table B-3. Power/IDE Activity LED Indicators

LED	On	Off
Power LED	Steady Green = Power On	Steady Off = Power Off
IDE Activity LED	Flashing Yellow = IDE activity (2 ½" IDE drive or Compact flash)	Steady Off = No IDE activity

Specifications

Environmental Specifications

Table B-4 provides the most efficient operating and storage condition ranges required for the ReadyBoard SBC installed into the ReadyBox 2U.

Table B-4. Environmental Requirements

Parameter	Conditions
Temperature	
Operating	+0° to +45°C (32° to +122°F)
Storage	-20° to +75°C (-4° to +167°F)
Humidity	
Operating	5% to 95% relative humidity, non-condensing
Non-operating	5% to 95% relative humidity, non-condensing

Power Specifications

Table B-5 lists the power requirements for the ReadyBox 2U.

Table B-5. Power Requirement

Parameter	Description
Input Type	+12VDC +/-5% or +24VDC +/-5%

Physical Specifications


Table B-6 gives the physical dimensions of the ReadyBox 2U as shown in Figures B-6 and B-7, and the mounting dimensions in Figures B-8 through B-13.

Table B-6. Weight and Footprint Dimensions

Parameters	Measurements (Enclosure Only)	Additional Measurements
Weight	1.24 kg (2 lbs., 7.4 oz.)	Without any ReadyBoard installed.
Height	88 mm (3.46")	96 mm (3.78") with plastic feet
Width	180 mm (7.09")	481.8 mm (18.97") with rack mounting attachments
Depth	159.6 mm (6.28")	197.60 mm (7.78") with rack mount handles


Mechanical Specifications

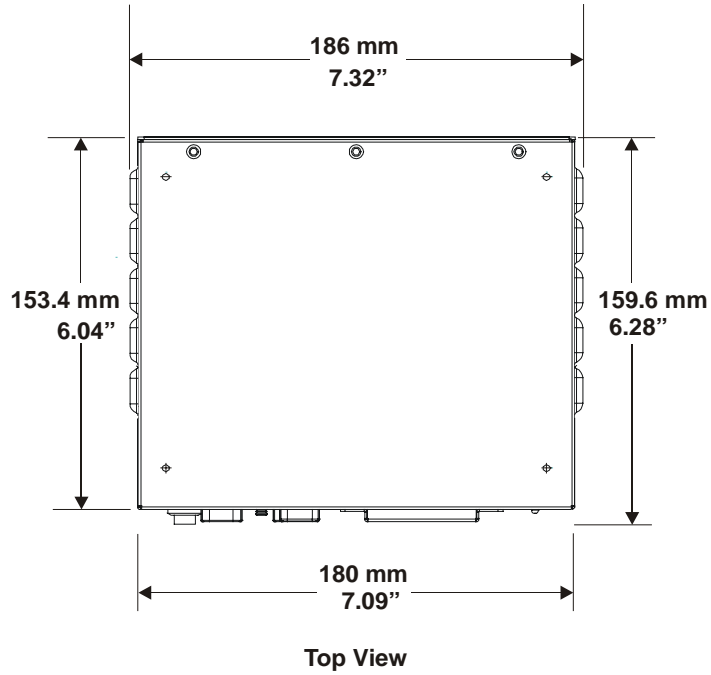Figures B-6 through B-13 show the ReadyBox 2U enclosure dimensions and mounting dimensions.




RdyBx2U_06a

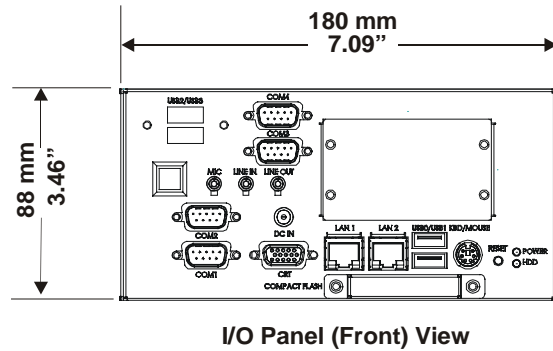Figure B-6. Width and Depth Dimensions (Top view)




RdyBx2U_07a

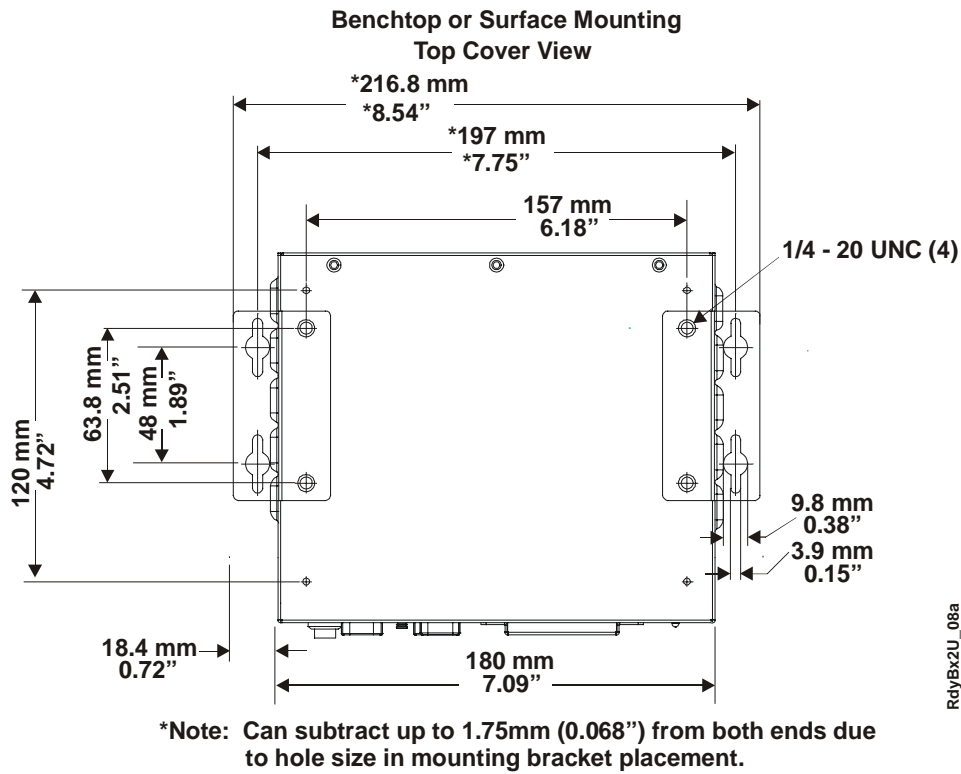Figure B-7. Width and Height Dimensions (Front view)




RdyBx2U_08a

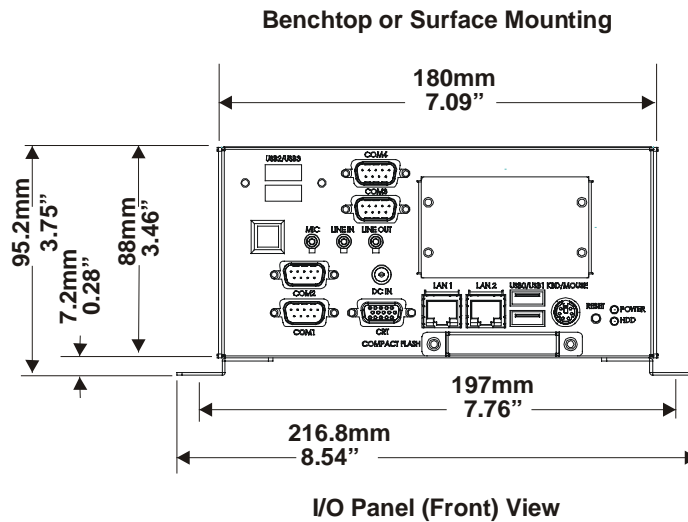Figure B-8. Benchtop or Surface Mounting Dimensions (Top view)



RdyBx2U_09a

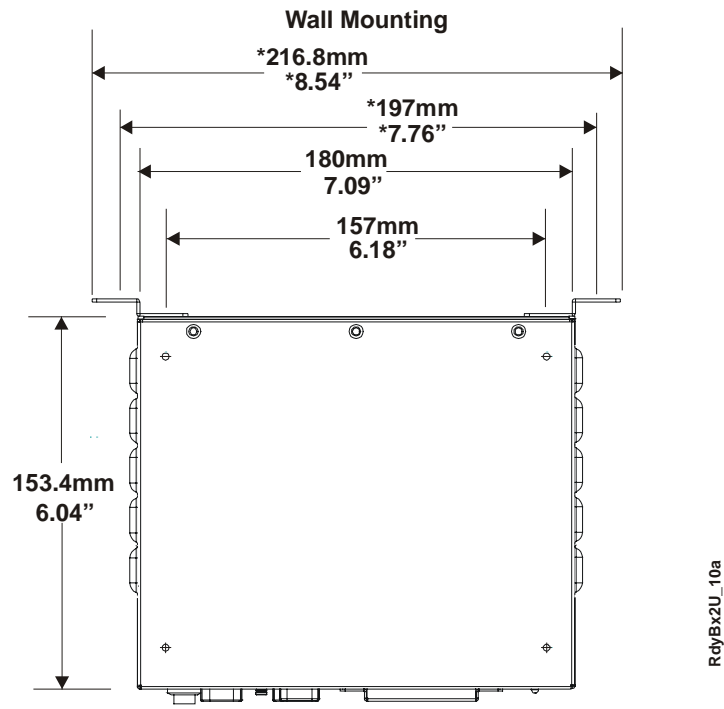
Figure B-9. Benchtop or Surface Mounting Dimensions (Front view)



*Note: Can subtract up to 1.75mm (0.068") from both ends due to hole size in mounting bracket placement.

Top Cover View

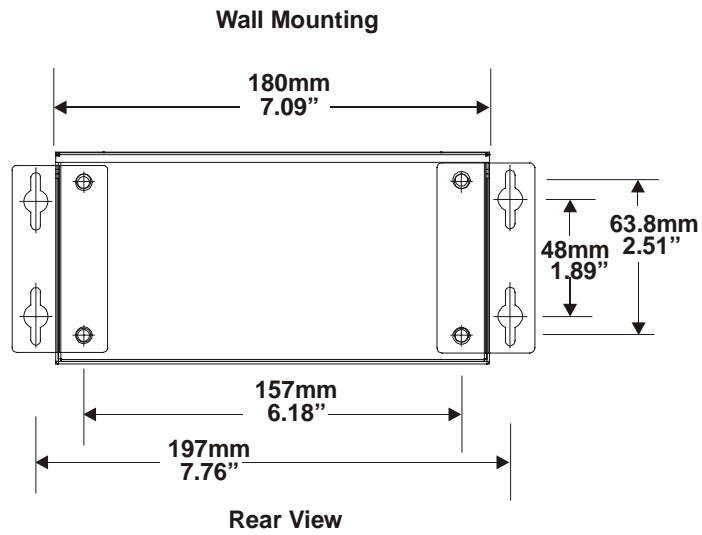Figure B-10. Wall Mounting Dimensions (Top view)



Rear View

Figure B-11. Wall Mounting Dimensions (Rear panel view)

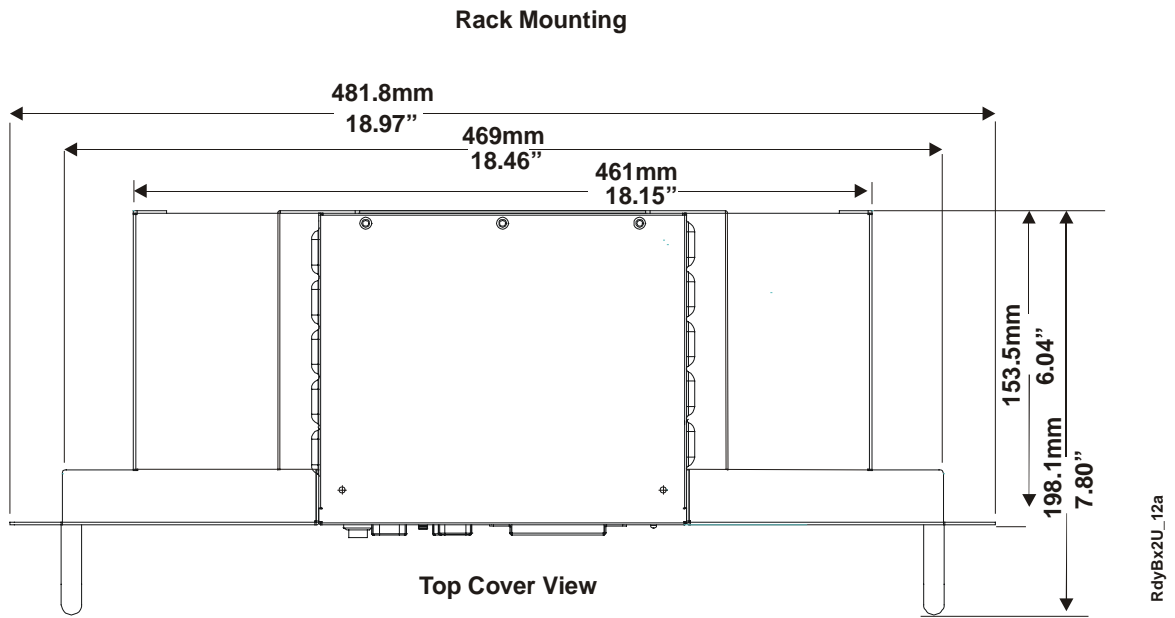


Figure B-12. Optional Rack-Mounting Dimensions (Top view)


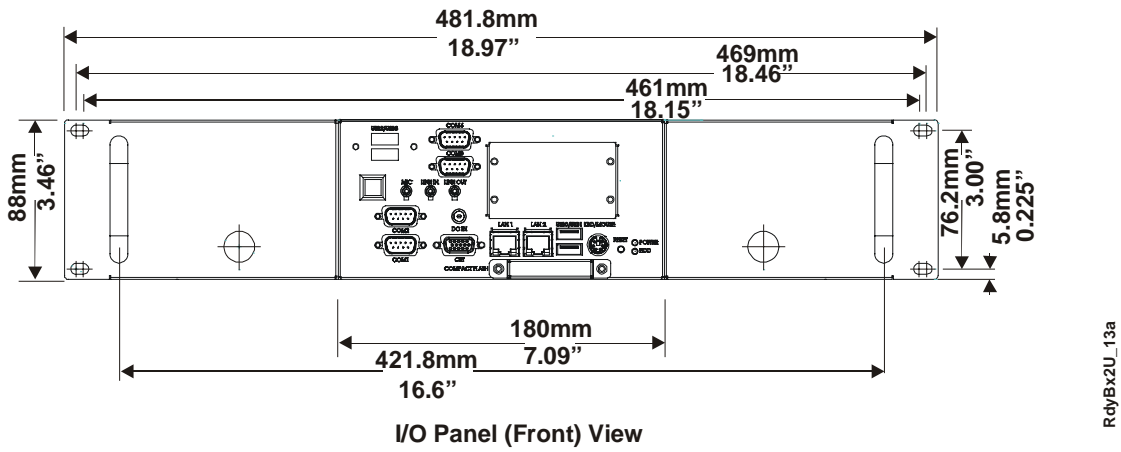


Figure B-13. Optional Rack-Mounting Dimensions (Front view)

Access Plates, Mounting, and Cover Locations

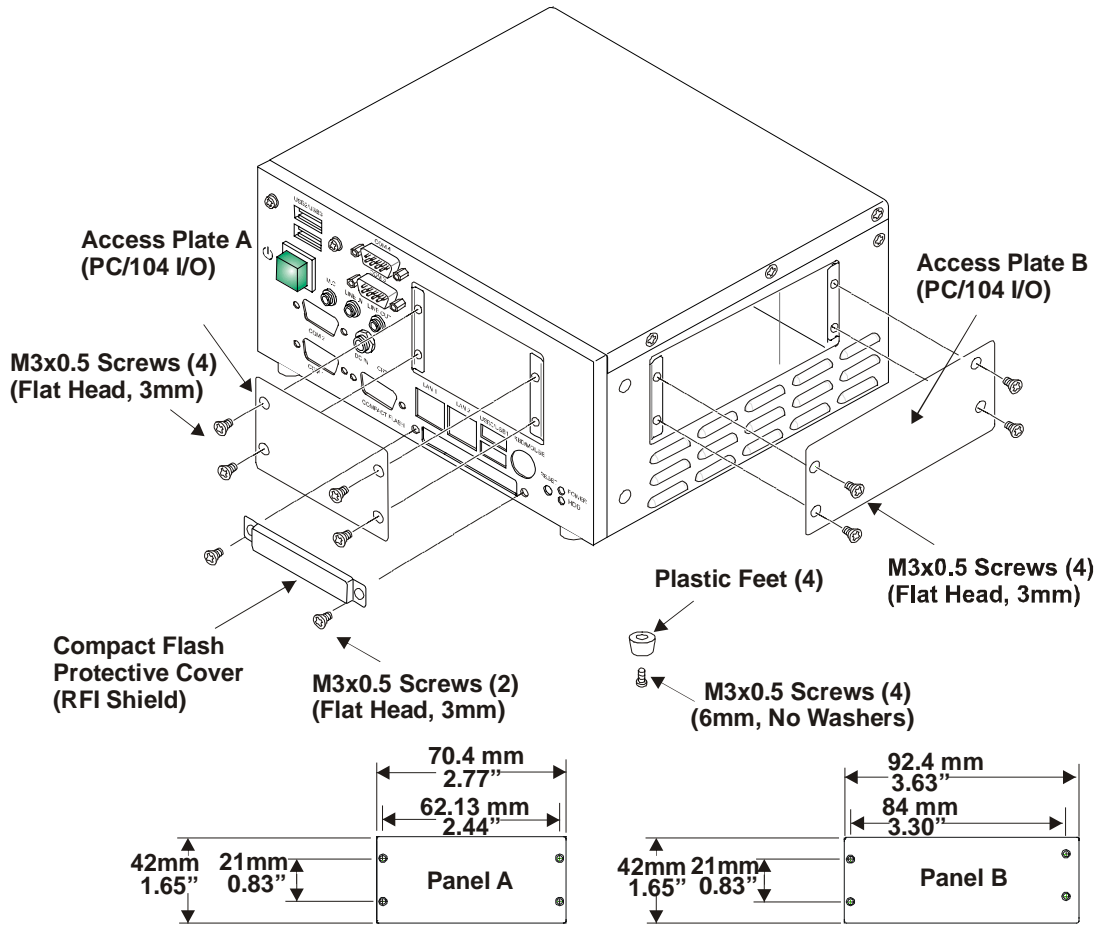Figures B-14 through B-17 provide the access plates, mounting, and cover locations. The four optional plastic feet with screws are also shown in Figure B-14.



RdyBx2U_14ab

Figure B-14. Access Plate Locations

NOTE The two access plates (A & B), shown in Figure B-14 (used for PC/104 input/output connections) are not the same width. See Table B-7.

Table B-7. Access Plate Dimensions

	Access Plate A	Access Plate B
Width	70.4 mm (2.77")	92.4 mm (3.63")
Height	42 mm (1.65")	42 mm (1.65")

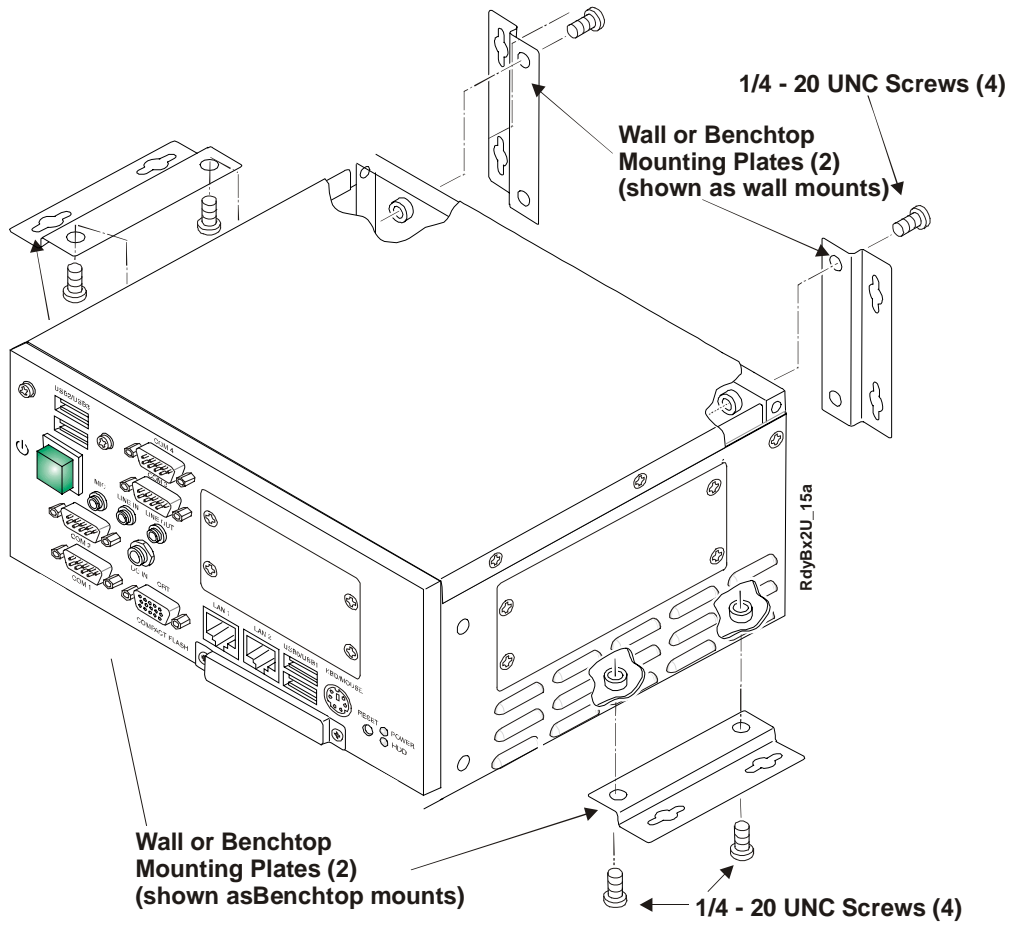


Figure B-15. Standard Mounting Hardware


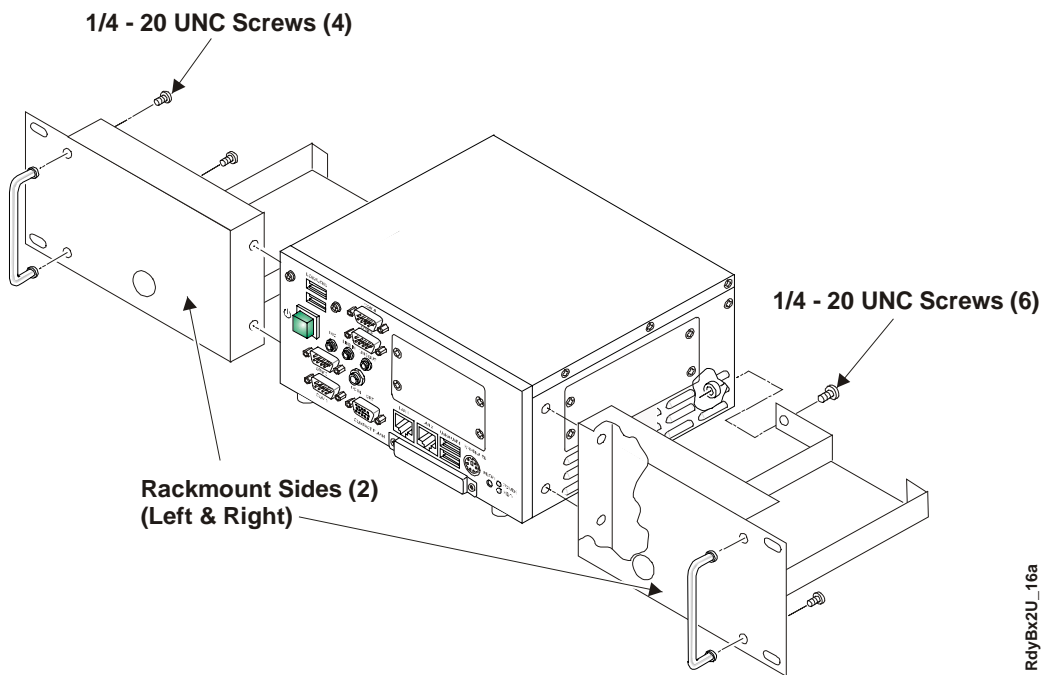


Figure B-16. Optional Rack Mounting Hardware

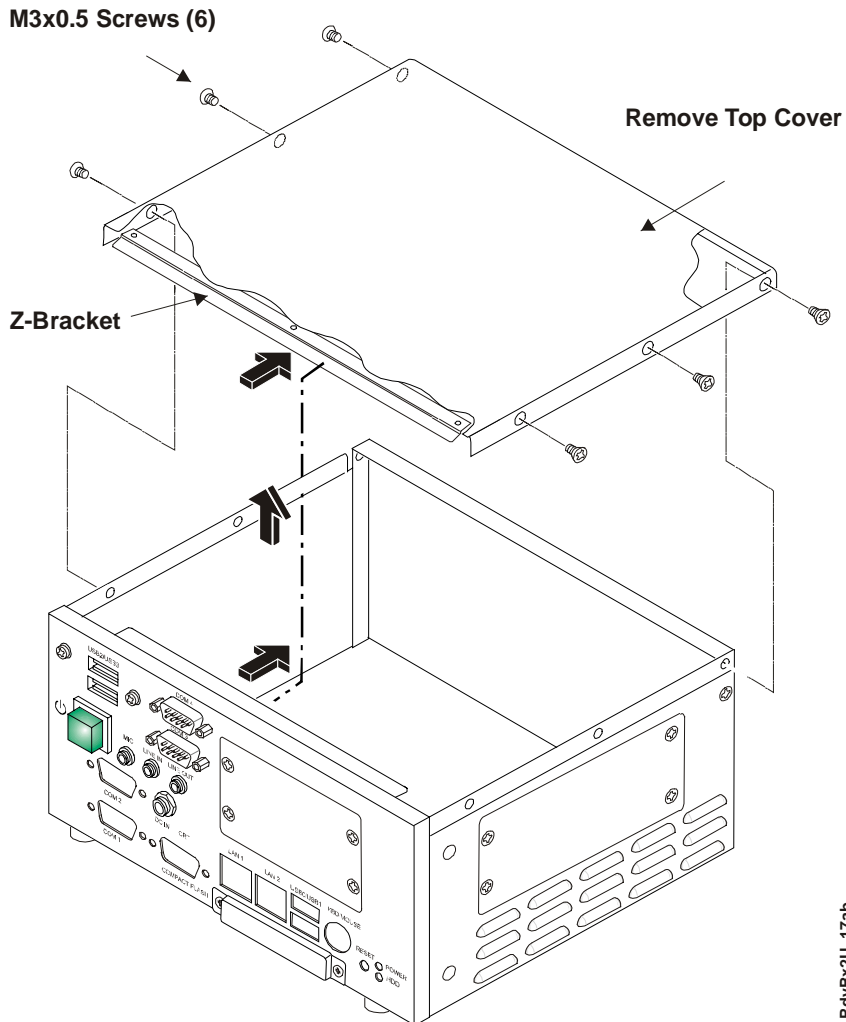

RdyBx2U_17ab

Figure B-17. Enclosure Cover Locations

CAUTION

To prevent damage to the top cover after removing the six screws, you must slide the top cover as shown in Figure B-17 before lifting the top cover off the enclosure, due to the Z-bracket lip.

