



# **LittleBoard™ 700**

## **Single Board Computer**

### **QuickStart Guide**

**P/N 5001671A Revision C**

## Notice Page

---

### NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Ampro Computers, Incorporated.

### DISCLAIMER

Ampro Computers, Incorporated makes no representations or warranties with respect to the contents of this manual or of the associated Ampro products, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Ampro shall under no circumstances be liable for incidental or consequential damages or related expenses resulting from the use of this product, even if it has been notified of the possibility of such damages. Ampro reserves the right to revise this publication from time to time without obligation to notify any person of such revisions. If errors are found, please contact Ampro at the address listed below on the Notice page of this document.

### TRADEMARKS

Ampro and the Ampro logo are registered trademarks, and CoreModule, EnCore, Little Board, LittleBoard, MiniModule, and ReadyBoard, are trademarks of Ampro Computers, Inc. All other marks are the property of their respective companies.

### REVISION HISTORY

Revision	Reason for Change	Date
A	Initial Release	June/03
B	I/O Board Update/Changes	July/03
C	Updates/Changes	Mar/04

Ampro Computers, Incorporated  
5215 Hellyer Avenue  
San Jose, CA 95138-1007  
Tel. 408 360-0200  
Fax 408 360-0222  
www.ampro.com

© Copyright 2003, 2004, Ampro Computers, Incorporated

## Audience Assumptions

---

This guide is for the person who designs computer related equipment, including but not limited to hardware and software design and implementation of the same. Ampro Computers, Inc. assumes you are qualified in designing and implementing your hardware designs and its related software into your prototype computer equipment.

# Contents

---

<b>Chapter 1</b>	<b>Setting Up the LittleBoard 700</b>	<b>1</b>
Using this Guide		1
Requirements		1
What's in the Box		1
Setup Steps		2
Preparations		2
Setting Up the Workspace		2
Connecting Cables to LittleBoard 700 Module		3
Connecting Peripherals and Boot Devices		7
Applying Power to the LittleBoard 700		8
<b>Chapter 2</b>	<b>Installing LittleBoard 700 Options</b>	<b>11</b>
CompactFlash Installation		11
Tools Required		11
CompactFlash Card Installation Guidelines		11
Installing the CompactFlash Card		12
Removing the CompactFlash Card		14
Memory Installation		15
Tools Required		15
Memory Installation Guidelines		15
Removing the DIMM		15
Installing the DIMM		17
Installing Software, Drivers, and Utilities		19
<b>Appendix A</b>	<b>Technical Support</b>	<b>21</b>
Contacting Support		21
Getting Updates		21
<b>Appendix B</b>	<b>I/O Interface Board</b>	<b>23</b>
I/O Interface Board Layout		23
I/O Interface Board Interface Connectors		23
<b>Appendix C</b>	<b>Connection Part Numbers</b>	<b>27</b>

<b>NOTE</b>	The graphic illustrations found in this manual are intended as aids in identifying the connector locations and components on the board. You may find slight variations between your board and the boards shown in this manual to due board revisions. Refer to Figure 1-5 and the LittleBoard 700 Reference Manual for the most current board revision and the connector pin/signal tables for specific information.
-------------	--

## List of Figures

Figure 1-1. LittleBoard 700 Connector Locations	3
Figure 1-2. I/O Interface Board Connector Locations	3
Figure 1-3. Connecting LittleBoard 700 Utility, Audio, Parallel, and Serial Cables	4
Figure 1-4. Connecting I/O Interface Board Audio and Utility Cables	4
Figure 1-5. LittleBoard 700 Connectors	5
Figure 1-6. Connecting LittleBoard 700 Video, IDE, Floppy, and Ethernet Cables	6
Figure 1-7. Connecting Peripherals to I/O Interface Board	7
Figure 2-1. Installing the CompactFlash Card	13

## Contents

---

Figure 2-2. CompactFlash Card Installed .....	13
Figure 2-3. Removing the CompactFlash Card .....	14
Figure 2-4. LittleBoard 700 DIMM Location .....	16
Figure 2-5. Removing a DIMM from a Slot .....	16
Figure 2-6. Installing a DIMM into a Slot.....	18
Figure B-1. I/O Interface Board .....	23

## List of Tables

Table 2-1. CompactFlash Jumper Settings.....	12
Table A-1. USA Technical Support Contact Information .....	21
Table B-1. Utility 1 Interface Pin/Signal Descriptions (J10) .....	23
Table B-2. Utility 2 Interface Pin/Signal Descriptions (J8) .....	24
Table B-3. Utility 3 Interface Pin/Signal Descriptions (J9) .....	25
Table B-4. Audio Interface Pin/Signal Descriptions (J16).....	25
Table C-1. Connector and Manufacture's Part Numbers.....	27

# Chapter 1 Setting Up the LittleBoard 700

---

## Using this Guide

This guide provides the most efficient way to set up your LittleBoard™ 700 single board computer (SBC). The instructions provided in this guide include:

- Removing the LittleBoard 700 from the shipping container and inventorying the accessories
- Connecting cables to the LittleBoard 700 and I/O Interface board
- Connecting the peripherals, boot devices, and power supply to the LittleBoard 700
- Powering up the LittleBoard 700

Information not provided in this QuickStart Guide includes:

- LittleBoard 700 Specifications
- Environmental requirements
- LittleBoard 700 connector/pin numbers and definitions
- Supplied software use and programming considerations

## Requirements

The following peripherals and devices are needed to make full use of the LittleBoard 700.

- Peripherals: (Customer provided)
  - ◆ PS/2 Keyboard
  - ◆ PS/2 Mouse
  - ◆ CRT Monitor
- Power Supply: (Customer provided)
  - ◆ AT or Lab power supply – This type of power supply is required to provide power to the LittleBoard 700.
- Choice of Boot Device: (Customer provided)
  - ◆ Floppy Disk drive
  - ◆ IDE hard disk drive
  - ◆ CompactFlash card
  - ◆ CD-ROM
- Optional Devices/Connections: (Customer provided)
  - ◆ TFT Flat Panel
  - ◆ Ethernet
  - ◆ USB
  - ◆ Audio components, such as headphones or speakers, and microphones

## What's in the Box

Refer to the QuickStart Kit Contents Sheet for a list of the items in the shipping container.

## Setup Steps

It is important to follow the setup steps in this section in the exact order listed here, but skip any steps that do not apply to your situation. References are provided to chapters within this guide or other Ampro guides, for more information about installation and use of this LittleBoard 700.

### Preparations

1) Open shipping box	<ul style="list-style-type: none"> <li>• Locate the QuickStart Kit Contents Sheet</li> <li>• Unpack the contents of the shipping box</li> </ul>
2) Verify Contents	<ul style="list-style-type: none"> <li>• Verify the contents of the shipping box against the QuickStart Contents Sheet included with your LittleBoard 700 shipping box.</li> <li>• If anything is missing or damaged, call your sales representative or Ampro Technical Support.</li> </ul>
3) Support Documentation (LittleBoard 700 Documentation & Support Software CD-ROM)	<p><i>LittleBoard 700 QuickStart Guide</i></p> <p>This document, provided as a hardcopy, describes how to setup, install, and power up the LittleBoard 700 found in the QuickStart Kit and is also on the LittleBoard 700 Documentation &amp; Software (Doc &amp; SW) CD-ROM as a PDF file.</p>
	<p><i>LittleBoard 700 Reference Manual</i></p> <p>This document describes the LittleBoard 700 and provides detailed reference information for your LittleBoard 700 and is located on the LittleBoard 700 Documentation &amp; Software (Doc &amp; SW) CD-ROM as a PDF file.</p>


### Setting Up the Workspace

<b>CAUTION</b>	<p>To prevent damage to the electronic components on the LittleBoard 700, do not handle the board until you have used Electrostatic Discharge precautions.</p> <p>Always touch a grounded, unpainted metal surface before touching the LittleBoard 700 or any of the components on the board.</p> <p>Always use an anti-static wrist strap connected to a grounding mat having static-dissipating characteristics and is attached to earth ground.</p>
----------------	--

4) Select workbench location	<ul style="list-style-type: none"> <li>• The workbench location should be flat, clear of debris, and have a static-free mat (or the equivalent) to place the LittleBoard 700 assembly onto for setup and operation (including the power supply and any peripherals).</li> </ul>
5) Connect an ESD strap to your body	<ul style="list-style-type: none"> <li>• Connect an ESD strap between your body (wrist or ankle) and ground or the static-free mat.</li> </ul> <p>If you do not have your own ESD strap, an ESD kit is provided in the QuickStart Kit with an anti-static wrist strap.</p>
6) Unpack the LittleBoard 700 and its accessories.	<ul style="list-style-type: none"> <li>• Remove the LittleBoard 700 from its protective plastic case and place it on static-free work surface with the preinstalled memory.</li> <li>• Remove the I/O Interface board from its protective plastic case and place it on static-free work surface. The external connections on the I/O Interface board, such as keyboard, mouse, etc. are used for the LittleBoard 700.</li> </ul>


## Connecting Cables to LittleBoard 700 Module

Connect the cables provided with the LittleBoard 700 QuickStart Kit to the respective connectors on the LittleBoard 700 and I/O Interface board provided. Skip any steps or cable(s) that do not apply to your situation.

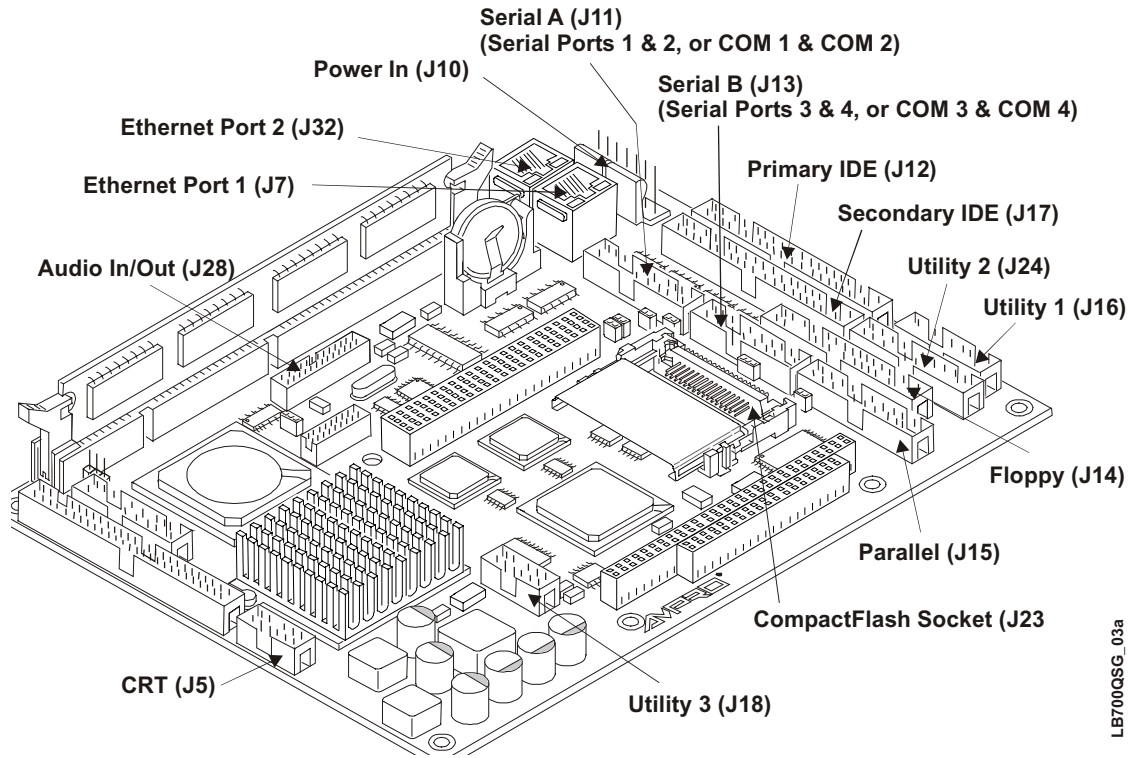

LB700QSG\_03a


Figure 1-1. LittleBoard 700 Connector Locations

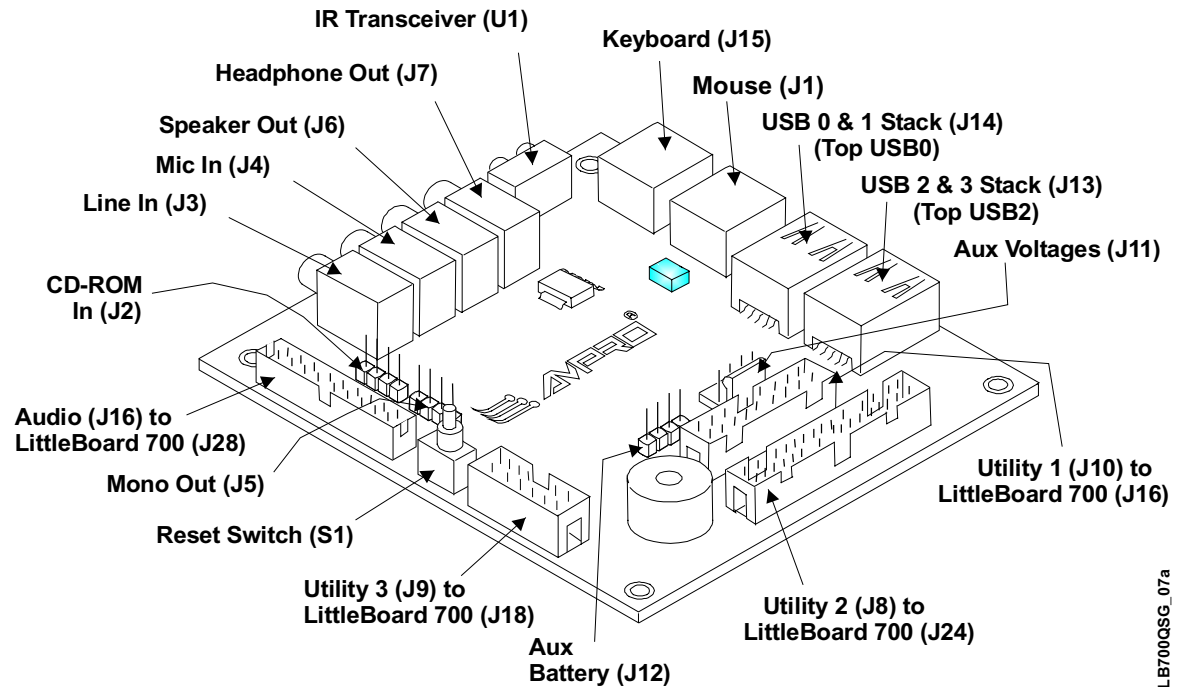

LB700QSG\_07a


Figure 1-2. I/O Interface Board Connector Locations

1) Connect Utility 1 Cable	Connect the Utility 1 cable between Utility 1 (J16) on the LittleBoard 700 and Utility 1 (J10) on the I/O Interface board. See Figures 1-1, 1-2, 1-3, and B-1.
2) Connect Utility 2 Cable	Connect the Utility 2 cable between Utility 2 (J24) on the LittleBoard 700 and Utility 2 (J8) on the I/O Interface board. See Figures 1-1, 1-2, 1-3, and B-1.
3) Connect Utility 3 Cable	Connect the Utility 3 cable between Utility 3 (J18) on the LittleBoard 700 and Utility 3 (J9) on the I/O Interface board. See Figures 1-1, 1-2, 1-3, and B-1.
4) Connect Audio In/Out Cable	Connect the Audio cable between the Audio In/Out (J28) on the LittleBoard 700 and the Audio In/Out (J16) on the I/O Interface board. See Figures 1-1, 1-2, 1-3, and B-1.

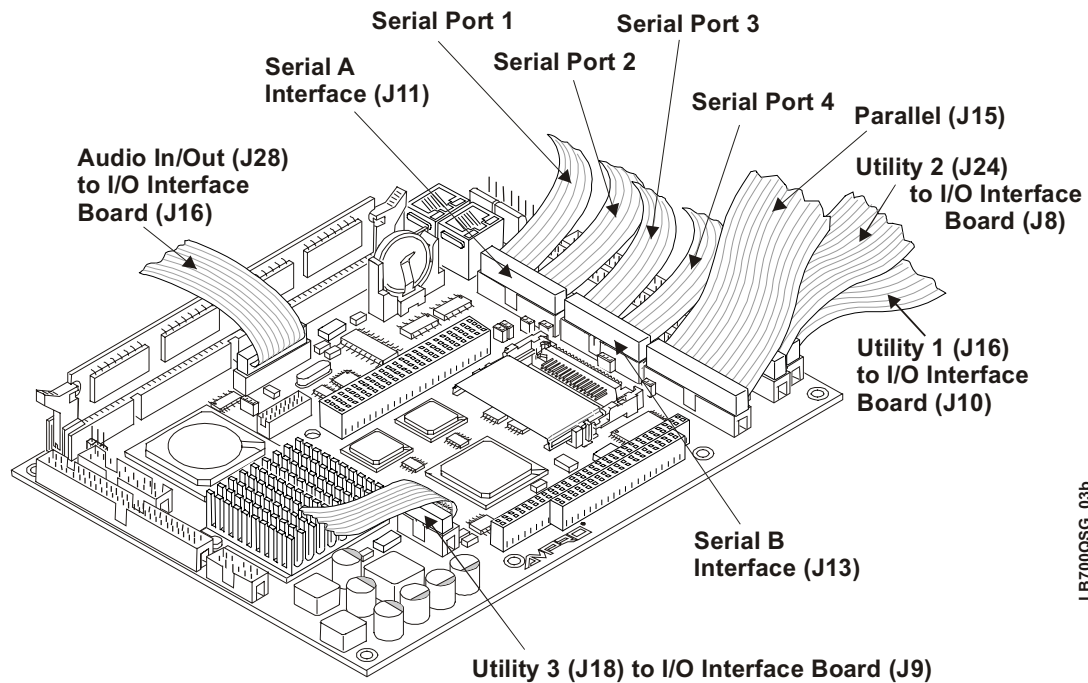

LB700QSG\_03b

Figure 1-3. Connecting LittleBoard 700 Utility, Audio, Parallel, and Serial Cables

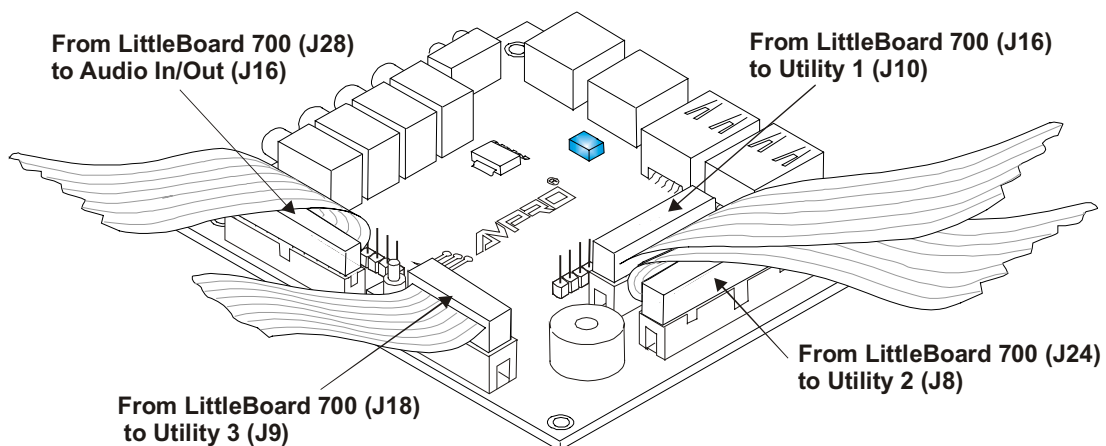

LB700QSG\_07b

Figure 1-4. Connecting I/O Interface Board Audio and Utility Cables

**NOTE**

Ensure you match the red strip on the ribbon cables (pin 1) to the pin 1's on the connectors shown below.


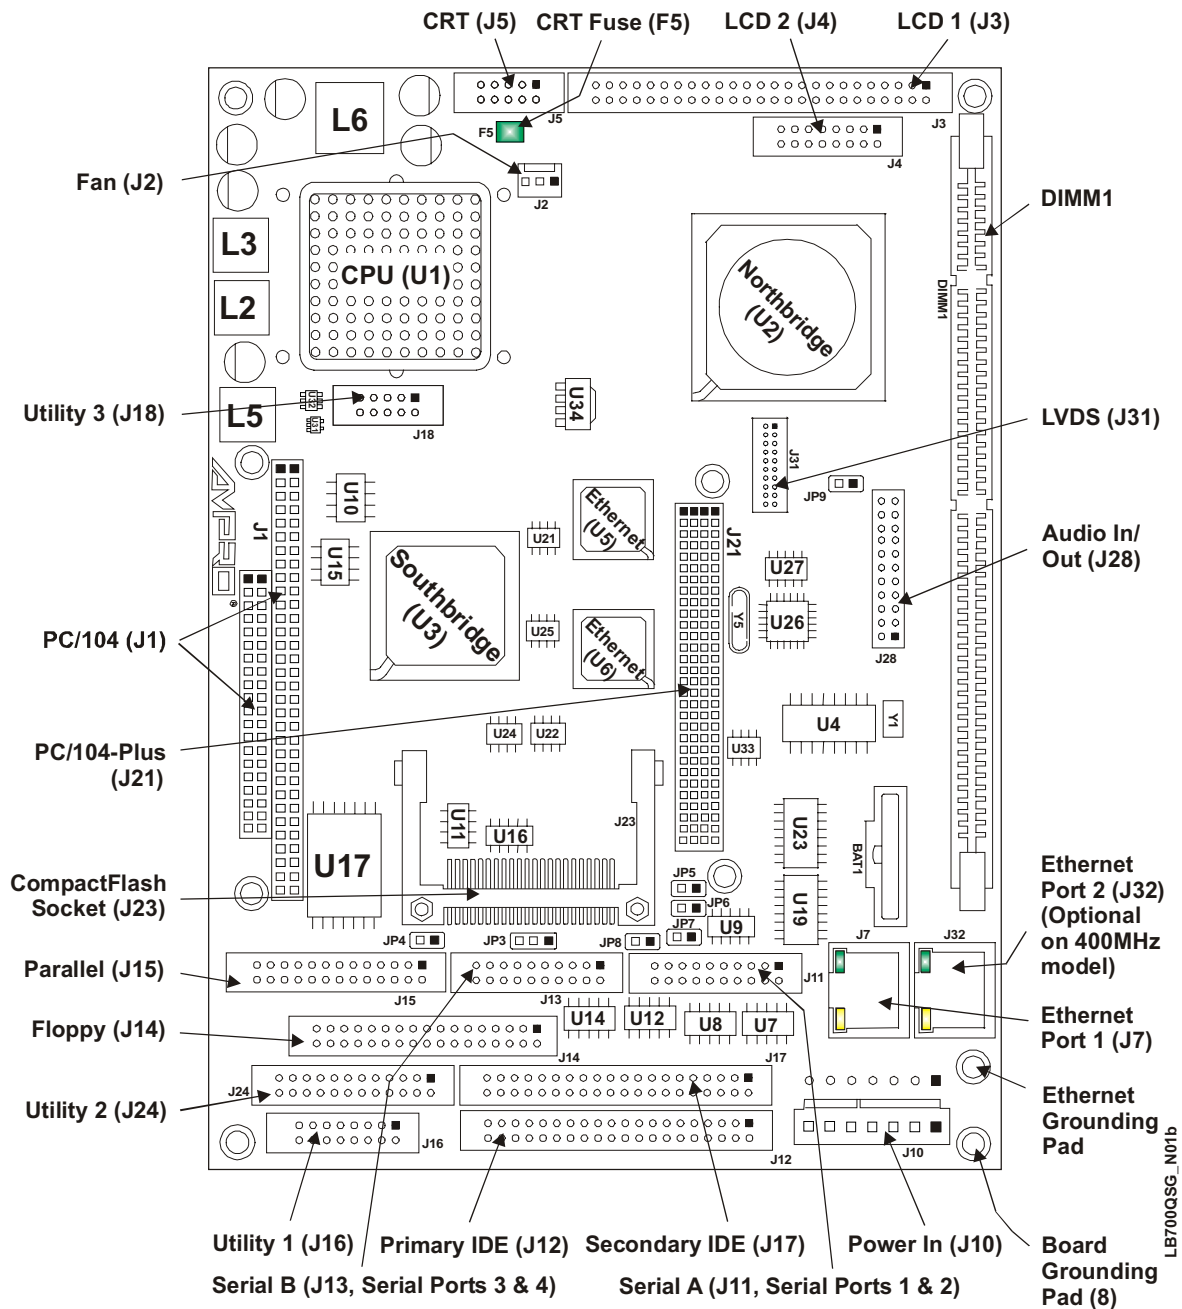


Figure 1-5. LittleBoard 700 Connectors

**CAUTION** The two Ethernet ports share a common ground (transformer center tap), that is floating until you determine how the ground is connected. The grounding holes (8) of the LittleBoard 700 are at the ground potential (return) provided by the DC power supply. You must decide how to best ground the Ethernet ground plane for proper operation in your situation.


Skip any of the following steps that do not apply to your situation.	
5) Connect Serial 1 Interface cables	Connect the Serial 1 interface cable for COM 1 and COM 2 to Serial 1 Interface connector (J11) on the LittleBoard 700. See Figures 1-1 to 1-5.
6) Connect Serial 2 interface cables	Connect the Serial 2 interface cable for COM 3 and COM 4 to the Serial 2 Interface connector (J13) on the LittleBoard 700. See Figures 1-1 to 1-5.
7) Connector Parallel cable	Connect the Parallel cable to the Parallel connector (J11) on the LittleBoard 700. See Figures 1-1 to 1-6.
8) Connect Floppy Cable	Connect the floppy cable to the floppy drive connector (J14). See Figures 1-1, 1-5, and 1-6.
9) Connect Primary IDE Cable	Connect an IDE cable to the Primary IDE connector (J12) on the LittleBoard 700. See Figures 1-1, 1-2, and 1-3.
10) Connect Secondary IDE Cable	Connect an IDE cable to the Secondary IDE connector (J17) on the LittleBoard 700. See Figures 1-1, 1-2, and 1-3.
11) Connect Video cable (CRT)	Connect the Video cable to the CRT connector (J5) on the LittleBoard 700. See Figures 1-1, 1-2, and 1-3.
12) Connect an Ethernet Port	Connect an Ethernet cable to the one of the Ethernet ports. See Figures 1-1, 1-5, and 1-6.
<div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p><b>NOTE</b> The second Ethernet port (J32) is optional on the 400MHz model.</p> </div>	

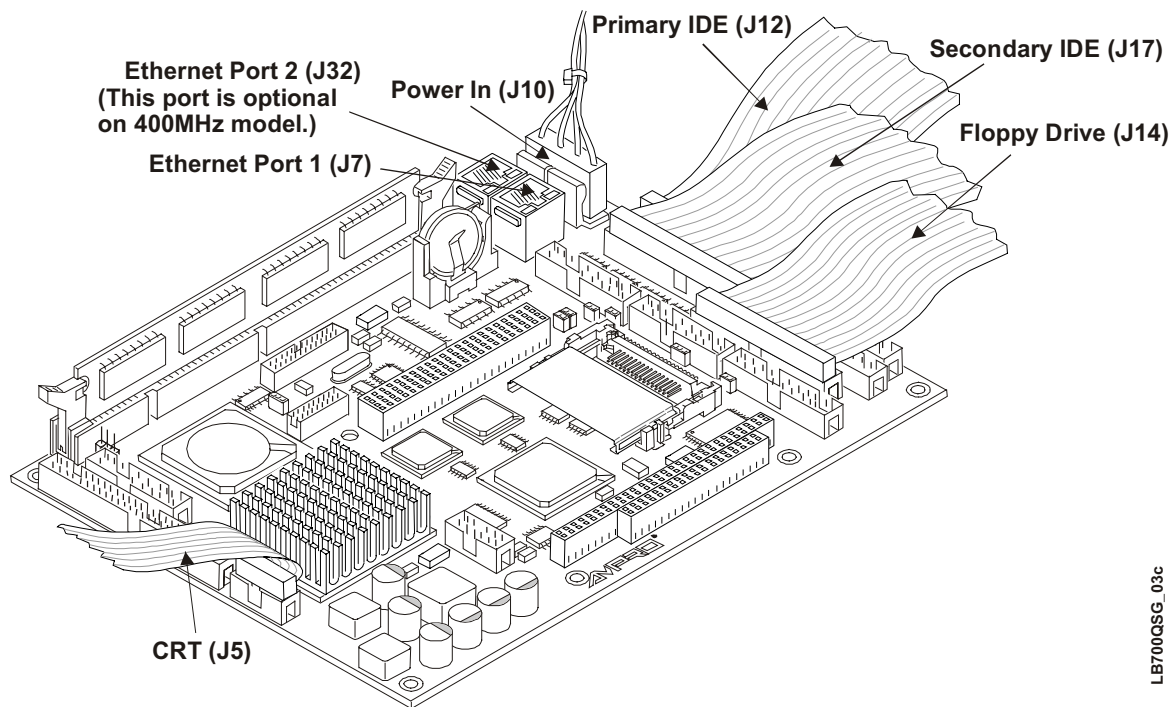


LB700QSG\_03c

Figure 1-6. Connecting LittleBoard 700 Video, IDE, Floppy, and Ethernet Cables


### Connecting Peripherals and Boot Devices

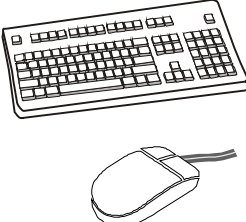
<p>13) Connect the peripherals I/O devices</p> 	<ul style="list-style-type: none"> <li>• Connect the keyboard to the I/O Interface board connector J1A.</li> <li>• If your are using a USB keyboard, connect it to the USB 0 connector (upper USB on J14) on the I/O Interface board.</li> </ul> <hr/> <ul style="list-style-type: none"> <li>• Connect the mouse cable to the I/O Interface board connector J1B.</li> <li>• If your are using a USB mouse, connect it to the USB 1 connector (lower USB on J14) on the I/O Interface board.</li> </ul>
--	---

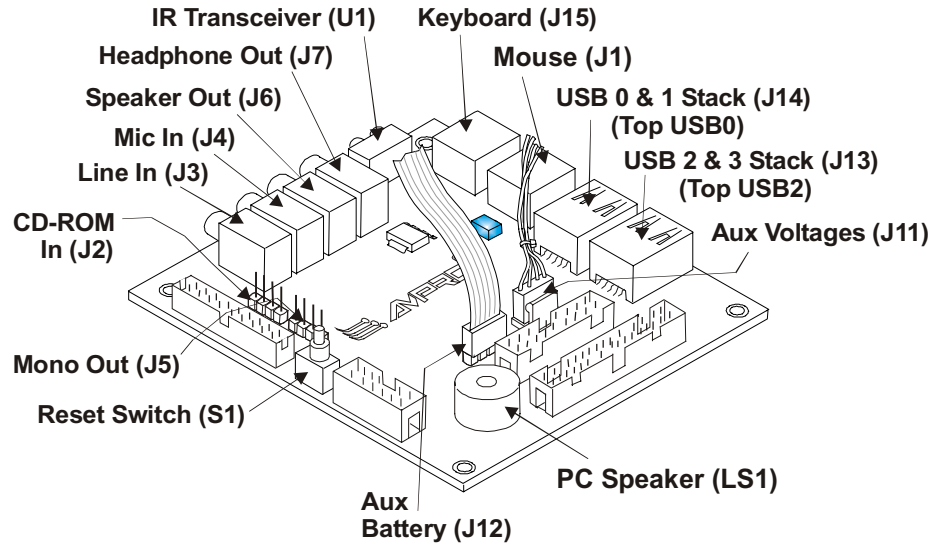

LB700QSG\_07c

**Figure 1-7. Connecting Peripherals to I/O Interface Board**


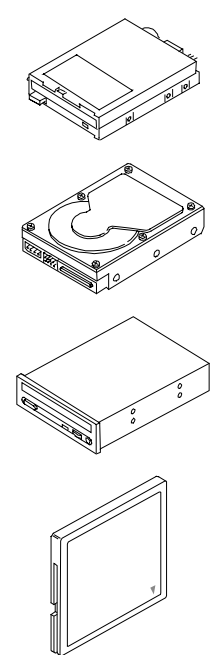
<p>14) Connect the OS boot devices</p>  <p><b>CompactFlash Card</b></p>	<ul style="list-style-type: none"> <li>• There are four options for connecting an (OS) boot device to the LittleBoard 700:             <ol style="list-style-type: none"> <li>Connect a floppy disk drive to the floppy disk drive cable connected to J14 on the LittleBoard 700.</li> <li>Connect an IDE hard disk drive to a free connector on the one of the IDE cables, Primary (J12) or Secondary (J17), on the LittleBoard 700.</li> <li>Connect a CD-ROM drive to an available connector on one of the IDE cables, Primary (J12) or Secondary (J17), on the LittleBoard 700.</li> <li>Install a CompactFlash (CF) card with a bootable OS into the CompactFlash socket (J23).</li> </ol> </li> </ul> <p>Refer to Chapter 2, <i>Installing LittleBoard 700 Options</i> later in this manual for CompactFlash card installation instructions into the socket (J23) and any limitations when using the CompactFlash card as a boot device. See Note with Step 19.</p>
--	---
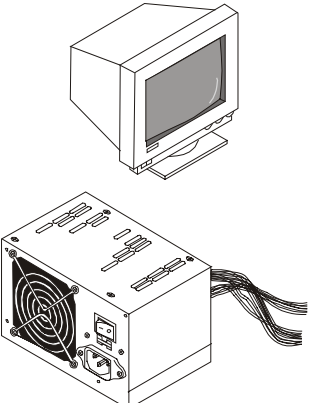
<p>15) Connect the monitor and power supply</p> 	<ul style="list-style-type: none"> <li>• Connect the CRT monitor to the video cable connected to J5 on the LittleBoard 700.</li> <li>• Connect the AT power supply to the J10 connector on the LittleBoard 700.</li> </ul>
<p>16) Connect all support devices to the power supply</p>	<ul style="list-style-type: none"> <li>• Ensure all of the support devices you have plugged into the LittleBoard 700 have good power connections to the AT power supply.</li> </ul>

### Applying Power to the LittleBoard 700

<p>17) Check/Set the Power Supply Input Voltage</p>	<ul style="list-style-type: none"> <li>• If the power supply module uses auto-ranging operation at 50/60Hz, skip this step.</li> <li>• Check the input voltage switch on the power supply located on the rear of the supply just below the power connector. The input voltage switch typically has two positions: 115 or 230 volts – 115 volts is default position.</li> </ul>
<p>18) Power up the LittleBoard 700</p>	<ul style="list-style-type: none"> <li>• Plug the CRT monitor's power cord into an AC outlet and turn on the monitor.</li> <li>• Plug the AT power supply's power cord into the AC outlet.</li> <li>• Turn the AT power supply's power switch to On before continuing.</li> </ul>
<p>19) Verify the LittleBoard 700 powers-up satisfactorily</p>	<ul style="list-style-type: none"> <li>• If a bootable device, or the desired operating system is not loaded on one of the boot devices (floppy drive or CD-ROM) prior to power up, you will see an error message "Disk boot failure, insert system disk and press enter" near the end of the boot process. The boot process stops until you intervene, by selecting from: <ul style="list-style-type: none"> <li>◆ Enter BIOS Setup using S for <u>S</u>etup or skip to Step 20.</li> <li>◆ Press R to <u>R</u>eboot the system</li> <li>◆ Connect a bootable device to the LittleBoard 700, <u>R</u>eboot the system, and then skip to Step 22.</li> <li>◆ Turn off the power switch on the power supply.</li> </ul> </li> </ul> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>NOTE</b> Ampro recommends not using a hard disk drive or CF card with a preinstalled OS from another model computer to boot the LittleBoard 700. This has proven to cause problems or provide unreliable operation. Use a bootable device (floppy or CD-ROM) to load the desired OS onto the hard drive (or CF) and then the drivers, while still attached to the LittleBoard 700. Refer to Step 22.</p> </div>

**NOTE** For the most current BIOS Information, refer to the Hardware Release Notes provided as hard copy in the shipping container.
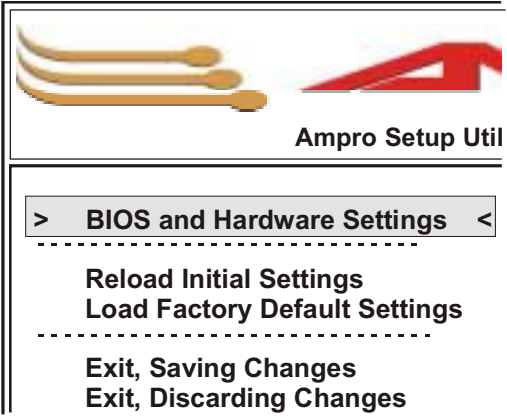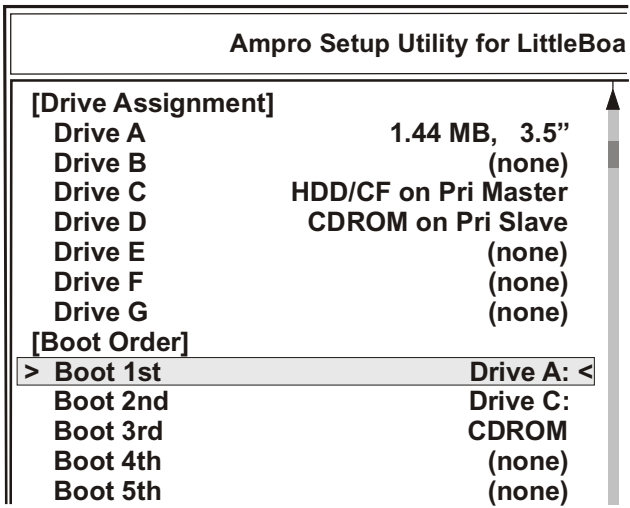
<p>20) Enter BIOS Setup</p>	<ul style="list-style-type: none"> <li>Press the &lt;Del&gt; key during POST, to enter BIOS Setup.</li> <li>Use BIOS Setup during the initial boot to set the desired options (time and date, recognize the IDE devices, alter the boot sequence of the floppy drive, CD-ROM, CompactFlash, or hard disk drive, etc.).</li> <li>Refer to the next step to alter the boot sequence, while in Setup.</li> </ul>
<p>21) Alter Boot Order, only if needed.</p>	<ul style="list-style-type: none"> <li>If you need to alter the boot sequence to select a bootable device, perform the items listed in this step.</li> </ul>
<p>a. Select the <i>BIOS and Hardware Settings</i> menu as shown in the figure to the right and press <b>Enter</b>.</p> <p>The sub-steps listed here show you how to change the Boot Sequence while in the BIOS Setup Utility.</p>	 <p style="text-align: right; font-size: small;">enterBIOSb</p>
<p>b. Select the first drive in the Boot Order as highlighted to the right.</p> <p>This example assumes Drive A is a 3 1/2" floppy drive, Drive C is an IDE HDD, and Drive D is an IDE CD-ROM.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>NOTE</b> The CD-ROM or CompactFlash (CF) must be listed in Drive Assignment and the Boot Order to be recognized by the BIOS. CF can only be listed as C or D drive in the Boot Order.</p> </div>	 <p style="text-align: right; font-size: small;">LB700BitSeqa</p>
<p>c. Use the Arrow keys and PU/PD keys to change the CD-ROM into the First Boot Device in the boot order.</p>	<ul style="list-style-type: none"> <li>Use the PU/PD keys to change from Drive A: (Floppy) to [CDROM] in the boot order.</li> <li>You will need to change Drive A:(Floppy) to the Third Boot Device or another boot device, to keep it in the boot sequence without a break in the boot device order.</li> </ul>
<p>d. Exit and Save changes.</p>	<p>There are other settings in BIOS Setup that also affect the floppy drive in the boot sequence and these fields next to be change too.</p>

22) Install the desired Operating System (OS)	<ul style="list-style-type: none"><li>• Locate the desired Operating System (OS) diskette(s) or CD-ROM and follow the manufacturer's instructions for installing the OS and the necessary drivers.  For Windows Operating Systems, some of the necessary drivers may be found on the manufacturer's installation CD-ROM.  For other Operating Systems, some or all of the necessary drivers may be found on the manufacturer's diskette(s) or CD-ROM.</li><li>• If you require drivers that are not available on the OS manufacturer's diskette(s) or CD-ROM, refer to <b><i>Installing Software, Drivers, and Utilities</i></b> in Chapter 2 and the LittleBoard 700 software subdirectory on the LittleBoard 700 Doc &amp; SW CD-ROM for instructions.</li></ul>
---	--

**NOTE**

The LittleBoard 700 ships from the factory configured for CRT support only. Ampro provides LCD/TFT support for flat panels with specific resolutions.

If you have questions about the flat panels, contact Technical Support through Virtual Technician for help in setting up the flat panel configurations. Refer also to the LittleBoard 700 Reference Manual and the Software Release Notes for additional instructions and information when customizing the BIOS to a particular flat panel.

# Chapter 2 Installing LittleBoard 700 Options

---

The procedures in the first part of this chapter describe how to install or remove the LittleBoard™ 700 SBC (Single Board Computer) options onto or from the board, including the CompactFlash card and DIMMs. Brief instructions for accessing and using the LittleBoard 700 Doc & SW (Documentation and Software) CD-ROM and a brief description for loading supported Operating Systems is also provided at the end of this chapter.

## CompactFlash Installation

The CompactFlash interface allows you to substitute solid-state flash memory cards for a conventional hard disk drive. Any of the supported operating systems, utilities, drivers, and application programs can easily be run from the CompactFlash card without modification.

<b>NOTE</b>	You may use Type I or Type II CompactFlash cards from commercially available suppliers, but check for compatibility with UDMA 100 IDE hard disk drives. Older CompactFlash cards that are not compatible with UDMA 100 IDE hard disk drives may cause system hangs.
-------------	---

## Tools Required

The following tools are needed to remove and install the CompactFlash card onto or off of the LittleBoard 700 SBC.

- Small to medium flat blade screwdriver
- Anti-static service kit - Use a complete anti-static service kit (or the equivalent) to remove or install the CompactFlash card. A complete anti-static service kit should include a static-dissipating work surface, a chassis clip lead, and a wrist or ankle strap.

## CompactFlash Card Installation Guidelines

The CompactFlash card, when installed, is used like one of the IDE drives supported by the EIDE disk controller on the LittleBoard 700 SBC.

- Configure the CompactFlash card as [HDD/CF on Pri Master/Slave] in the “Drive Assignment” and “Boot Order” as a hard disk drive in the BIOS Setup.
- The CompactFlash Card becomes the master or slave depending on the setting of the Master/Slave jumper (JP4).
- No two devices on the IDE bus can both be master or both be slave at the same time.

<b>NOTE</b>	Ampro recommends not using a CompactFlash card with a preinstalled OS from another model computer to boot the LittleBoard 700. This has proven to cause problems or provide unreliable operation. Use a bootable device (floppy or CD-ROM) to load the desired OS onto CompactFlash card and then the drivers, while attached to the LittleBoard 700.  Then the CompactFlash card can used to boot the Little Board 700 without difficulty.
-------------	---

## Installing the CompactFlash Card

1. LittleBoard 700 preparation:
  - ◆ If the LittleBoard 700 is already prepared for CompactFlash installation, with power disconnected, skip to Step 3.
  - ◆ If the LittleBoard 700 is connected and operating, power down the system and continue with next step.

**CAUTION** To prevent damage to the LittleBoard 700, ensure the power supply is turned off and the power cord has been removed from the power source. The typical AT power supply will continue to provide standby current to the chassis until the power cord is disconnected.

2. Disconnect the power cord from the power source.

**CAUTION** To prevent damage to the LittleBoard 700 or the CompactFlash card, do not touch either one until you have discharged yourself and have followed good Electrostatic Discharge principals. The LittleBoard 700 and the CompactFlash card are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling either one:

Leave the CompactFlash in the anti-static bag until you are ready to install it.

Always use an anti-static wrist/ankle strap and a grounding mat connected to ground.

Before you remove a CompactFlash from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.


3. Check for bent pins or debris on the pins of the CompactFlash socket (J23).
4. Remove the CompactFlash card from its protective bag, handling the CompactFlash card by its edges.
5. Determine the type of CompactFlash card you are installing (+5V/+3.3V) and if it is to be used as Master or Slave.
6. Set the jumpers, JP3 and JP4, for the correct settings before continuing. See Table 2-1.

**Table 2-1. CompactFlash Jumper Settings**

Jumper #	Installed	Removed/Replaced
JP3 – CompactFlash Voltage Selection	Enable +5V (1-2) <b>Default</b>	Enable +3.3V (1-3)
JP4 – CompactFlash Master/Slave	Enable Master (pins 1-2) <b>Default</b>	Enable Slave (Removed)


7. Insert the CompactFlash card into the slot provided by the tabs on the protective cover as shown in Figure 2-1.

The CompactFlash card edge and socket are keyed to install in only one orientation.

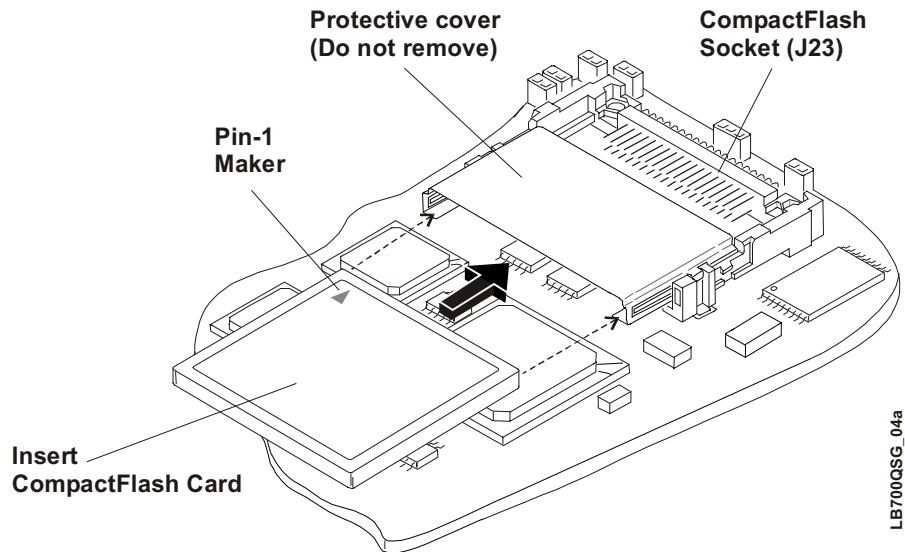

**Figure 2-1. Installing the CompactFlash Card**

8. Push the CompactFlash card into the socket until it is firmly into the socket and mates with the pins. See Figures 2-1 and 2-2.
9. Ensure all the connections to the LittleBoard 700 are still connected.
10. Plug the power supply's power cord into the AC power source and restore power.

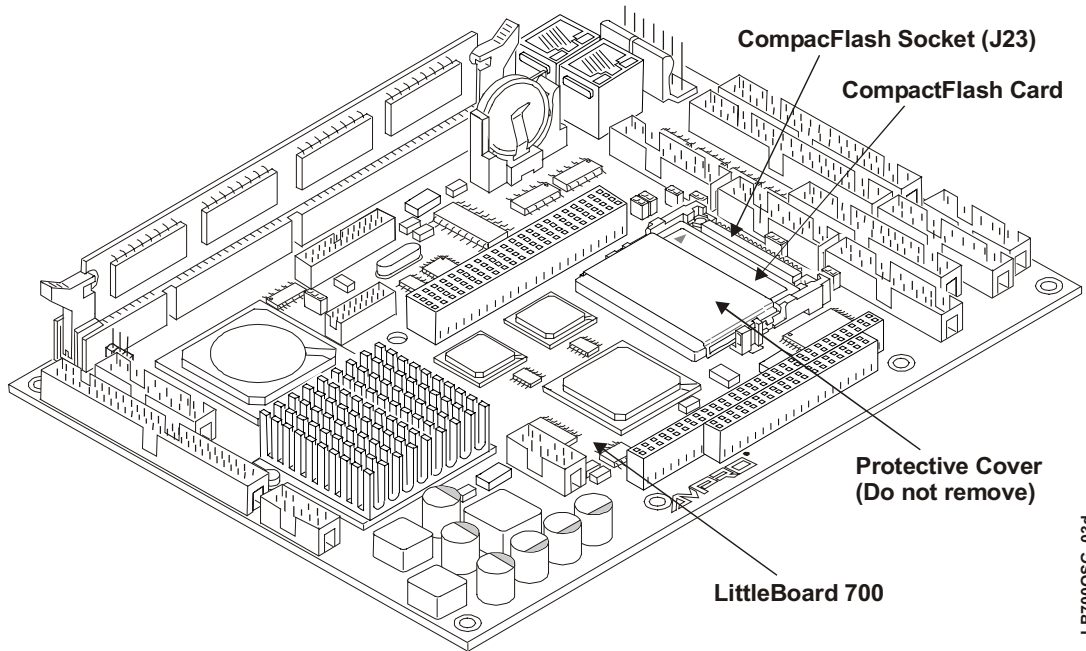

**Figure 2-2. CompactFlash Card Installed**

## Removing the CompactFlash Card

1. If the LittleBoard 700 SBC is already powered up, power down the system.

**CAUTION** To prevent damage to the LittleBoard 700 or the CompactFlash, ensure the power supply is turned off and the power cord has been removed from the power source. The typical AT power supply will continue to provide standby current to the chassis until the power cord is disconnected.

2. Disconnect the power cord from the power source.


**CAUTION** To prevent damage to the LittleBoard 700 or the CompactFlash card, do not touch either one until you have discharged yourself and have followed good Electrostatic Discharge principals. The LittleBoard 700 and CompactFlash cards are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling the CompactFlash cards:

Leave the CompactFlash in the anti-static bag until you are ready to install it.

Always use an anti-static wrist/ankle strap and a grounding mat connected to ground.

Before you remove a CompactFlash card from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.

3. Insert a small to medium flat blade screwdriver into the slot as shown in Figure 2-3.

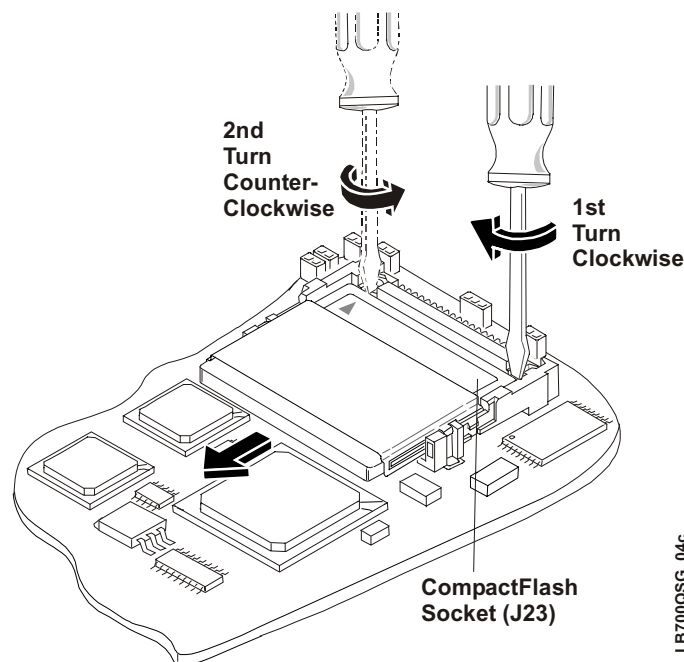

**Figure 2-3. Removing the CompactFlash Card**

4. Turn the screwdriver clockwise to loosen the CompactFlash card as shown in Figure 2-3.
5. Move the screwdriver to the other slot and turn the screwdriver counter-clockwise to completely disengage the CompactFlash card from the socket. See Figure 2-3.

6. Grasp the two sides of the CompactFlash card and gently pull it from the CompactFlash socket/protective cover and place on anti-static surface or in anti-static bag.
7. If you are not replacing the CompactFlash card with another CompactFlash, ensure you have set JP4 to the correct setting (Master/Slave) before continuing. See Table 2-1.
8. Ensure all the connections to the LittleBoard 700 are still connected and restore power to the system.

## Memory Installation

The LittleBoard 700 uses a single DIMM slot available on the topside of the board. The LittleBoard 700 supports PC 133 (133MHz, 7.5ns) and PC 100 (100MHz, 10ns), 3.3V, 168-pin, SDRAM DIMM.

<b>NOTE</b>	Ampro recommends using only PC 133 (133MHz), 3.3V, 7.5ns, 168-pin, SDRAM DIMM, but PC 100 (100MHz, 10ns) will function. PC 133 provides the best performance for the Pentium processor.
-------------	---

### Tools Required

Use an anti-static service kit (or the equivalent) to remove or install the DIMM. An anti-static service kit should include a static-dissipating work surface, a chassis clip lead, and a wrist or ankle strap.

### Memory Installation Guidelines

- When handling a DIMM, observe anti-static discharge precautions to avoid damage.
- The LittleBoard 700 uses PC 133 (133MHz) and PC 100 (100MHz), SDRAM DIMMs, which are electrically different from EDO DIMMs.
- The following DIMMs sizes are available from Ampro: 32MB, 64MB, 128MB, 256MB, 512MB, or 1GB.
- The LittleBoard 700 supports up to 1GB of memory in the DIMM slot.

### Removing the DIMM

Use this procedure to remove the DIMM from the DIMM slot on the LittleBoard (LB) 700.

1. If the LittleBoard 700 is already powered up, power down the system.


<b>CAUTION</b>	To prevent damage to the LittleBoard 700 and the DIMM, ensure the power switch on the power supply is turned off and the power cord has been removed from the power source. The typical power supply will continue to provide standby current to the board until the power cord is disconnected.
----------------	--

2. Disconnect the power cord from the power source.

<b>CAUTION</b>	<p>To prevent damage to the DIMM, do not touch the DIMM until you have discharged yourself and followed good Electrostatic Discharge principals. The DIMMs are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling a DIMM:</p> <p>Leave the DIMM in the anti-static bag until you are ready to install it.</p> <p>Always use an anti-static wrist/ankle strap and a grounding mat connected to ground.</p>
----------------	---


**CAUTION** Before you remove a DIMM from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.

3. Locate the DIMM slot. See Figure 2-4.

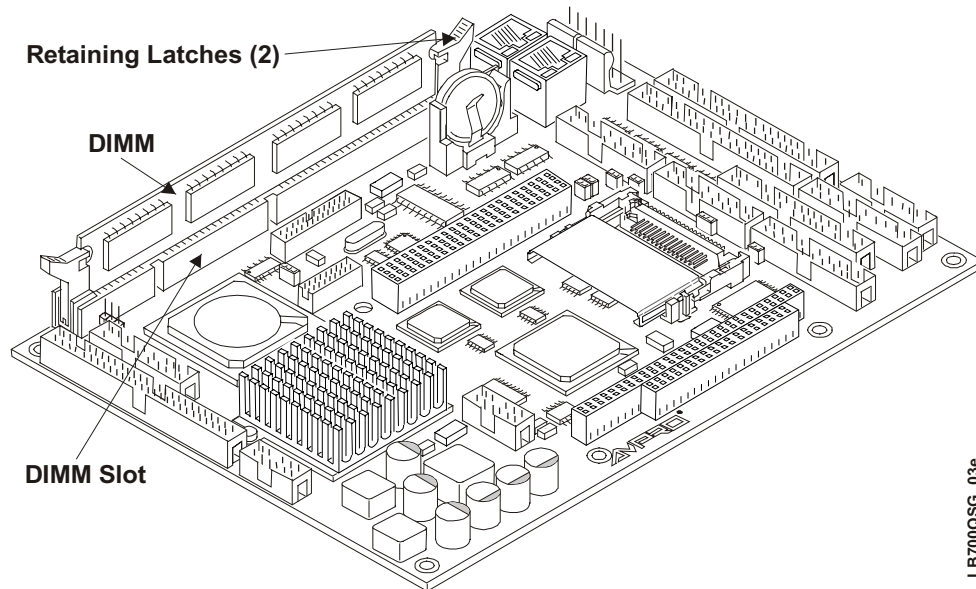

**Figure 2-4. LittleBoard 700 DIMM Location**

4. Open both retaining latches to release and lift the DIMM from the slot. See Figure 2-5.  
The DIMM will spring up from the slot once you open both retaining latches. Opening the DIMM retaining latches releases the DIMM, lifting its bottom edge away from the slot.

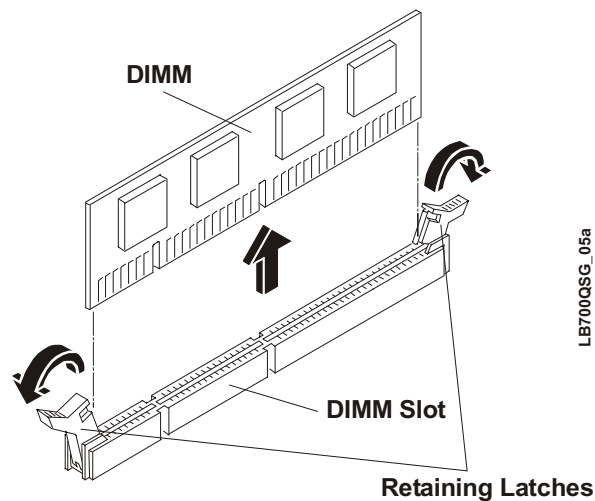

**Figure 2-5. Removing a DIMM from a Slot**

5. Lift the DIMM completely away from the slot. See Figure 2-5.
6. Place the DIMM on an anti-static surface or in an anti-static bag.

**NOTE** If you remove the DIMM and restore power without a DIMM installed, you will not see a display.

## Installing the DIMM

If you want to install a larger size DIMM or replace an existing DIMM, refer to the following procedure.

1. Prepare the LittleBoard 700 for installation:
  - ◆ If the LittleBoard 700 is already prepared for DIMM installation, with the power turned off, the power cord disconnected, and an empty DIMM slot, skip to Step 4.
  - ◆ If the LittleBoard 700 is operating, power down the system and continue with next step.

<b>CAUTION</b>	To prevent damage to the LittleBoard 700 and the DIMM, ensure the power switch on the power supply is turned off and the power cord has been removed from the power source. The typical AT power supply will continue to provide standby current to the board until the power cord is disconnected.
----------------	---


2. Disconnect the power cord from the power source.

<b>CAUTION</b>	To prevent damage to the DIMM, do not touch the DIMM until you have discharged yourself and followed good Electrostatic Discharge principals. The DIMMs are sensitive to static electricity and can be easily damaged by improper handling. Do the following when handling a DIMM:  Leave the DIMM in the anti-static bag until you are ready to install it.  Use an anti-static wrist/ankle strap and a grounding mat connected to ground.  Before you remove a DIMM from the anti-static bag, touch a grounded, unpainted metal surface to discharge any static electricity.
----------------	--

3. Remove the existing DIMM from the DIMM slot before continuing.  
Refer to the Step 4 in the proceeding procedure, *Removing the DIMM*, and follow the remaining steps in that procedure before continuing.
4. Remove the DIMM from its protective bag, handling the DIMM by its edges.
5. Ensure the two retaining latches are spread outward to accept the new DIMM.

<b>NOTE</b>	Ampro recommends using only PC 133 (133MHz), 3.3V, 7.5ns, 168-pin, SDRAM DIMM, but PC 100 (100MHz) will function. PC 133 provides the best performance for the Pentium processor.
-------------	---

6. Align the notches on the DIMM with the keys on the DIMM slot, holding the DIMM at a 90° angle to the board. See Figure 2-6.  
The DIMM card edge and slot are keyed to install the DIMM into the slot in only one direction.

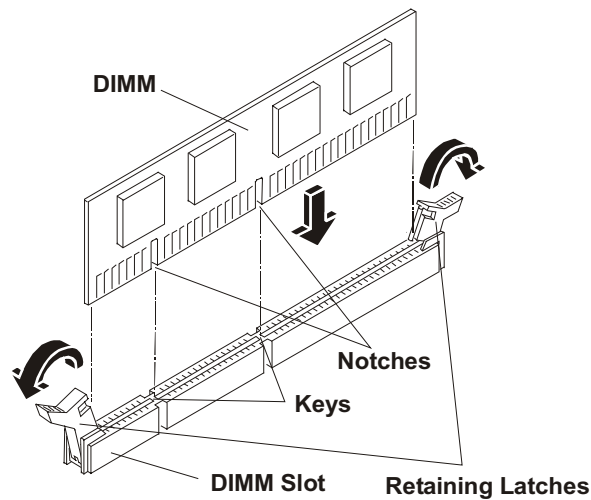

**Figure 2-6. Installing a DIMM into a Slot**

7. Insert the DIMM fully into the slot, handling the DIMM by its edges.

The retaining latches should grasp the DIMM automatically if it is inserted properly. If the latches do not fully close after you have installed the DIMM, the DIMM is not inserted correctly.

8. Apply firm and even pressure as you push down on the DIMM, fully inserting it into the slot.

<b>CAUTION</b>	To prevent damage to the DIMM or the socket, do not rock the DIMM into place, but apply firm and even pressure downward.
----------------	--

9. If the retaining latches do not close completely on the DIMM, remove it and repeat Steps 5 to 8.
10. Reconnect the power cord to the power source.
11. Restore power to the LittleBoard 700 and observe the boot screen for new memory recognition.

If the system does not boot or there is a problem recognizing the new memory, the new DIMM could be defective or the DIMM was not properly installed or recognized.

## Installing Software, Drivers, and Utilities

To install the operating system and respective software drivers, refer to the following procedure.

1. Install the desired Operating System (OS) and related drivers from the manufacturer's diskette(s) or CD-ROM.

Follow the manufacturer's instructions to install the desired OS and respective drivers.

- ◆ For Windows Operating Systems, some of the necessary drivers may be found on the manufacturer's installation diskette or CD-ROM. If more software drivers are needed, refer to the LittleBoard 700 Doc & SW CD-ROM.
  - ◆ For other Operating Systems, some or all of the necessary drivers may be found on the manufacturer's installation diskette(s) or CD-ROM. If not, refer to the LittleBoard 700 Doc & SW CD-ROM.
2. Run the LittleBoard 700 Doc & SW CD-ROM to access the LittleBoard documentation, various utilities, and OS drivers not on the manufacturer's diskette(s) or CD-ROM.

The LittleBoard 700 Doc & SW CD-ROM will operate on any Windows PC, allowing you to view, download, or print the contents of the CD-ROM. This includes the *LittleBoard 700 QuickStart Guide*, *LittleBoard 700 Reference Manual*, Release Notes, software drivers and various utilities.

### NOTE

You must have an Internet browser to view the main menu and make selections (examples: Microsoft Internet Explorer 4.x, or greater, Netscape Navigator version 4.x, or greater, or the equivalent on a PC). Software download links are provided for Adobe Acrobat Reader version 4.x or greater to view the manuals and documents.

An Internet connection is required for the Adobe Acrobat link or access to the Ampro web site.

The LittleBoard 700 Doc & SW CD-ROM should auto-start, but if it does not, go to the root level of the CD-ROM and locate the index.htm by:

- a. Selecting Run from the Start menu in any Windows PC.
- b. Browsing the contents of the CD-ROM until you find the index.htm at the root level.
- c. Select this file and press OK to start the CD-ROM.

The CD-ROM starts and opens the main menu of the CD-ROM.

3. Select from the directories as shown below:

- ◆ LittleBoard 700 Documentation (Release Notes, LittleBoard 700 Reference Manual and QuickStart Guide)
- ◆ LittleBoard 700 Software (Supported operating systems, drivers, and Board Support Packages)
- ◆ I/O Interface board Documentation (schematic, board layout, BOM, and AVL)
- ◆ Need Adobe Acrobat? (Link to Adobe Acrobat Reader; requires Internet connection)
- ◆ Check for Latest Updates (Hot link to Ampro web site for finding and downloading the latest updates; refer to *Getting Updates* in Appendix A, *Technical Support*; also requires Internet connection)

There are directories and subdirectories under these topics that should provide you with the needed manuals, utilities, and tools not explained earlier.

4. Install any special OS drivers not found on the manufacturer's diskette(s) or CD-ROM.

Refer to the directories on the LittleBoard 700 Doc & SW CD-ROM for instructions on installing the special drivers for the desired OS.

If the desired drivers can not be found, contact Ampro through the Virtual Technician on the web site with a request for the driver(s). Use the Link to Ampro's web site on the LittleBoard 700 Doc & SW CD-ROM. Refer also to the Appendix A, Technical Support for more information.

5. Install any utilities or other development tools you may need from the LittleBoard 700 Doc & SW CD-ROM.

Refer to the directories on the LittleBoard 700 Doc & SW CD-ROM for instructions on installing and using the utilities or development tools for the desired OS.

# Appendix A Technical Support

---

## Contacting Support

Ampro Computers, Inc. provides a number of methods for contacting Technical Support listed below in Table A-1. Requests for support through the Virtual Technician are given the highest priority, and usually will be addressed within one working day.

- Ampro Virtual Technician – This is a comprehensive support center designed to meet all your technical needs. This service is free and available 24 hours a day through the Ampro web site at <http://ampro.custhelp.com>. This includes a searchable database of Frequently Asked Questions, which will help you with the common information requested by most customers. This is a good source of information to look at first for your technical solutions. However, you have to register online first before you can log into access this service.

Personal Assistance – You may also request personal assistance by going to the "Ask a Question" area in the Virtual Technician. Requests can be submitted 24 hours a day, 7 days a week. You will receive immediate confirmation that your request has been entered. Once you have submitted your request you can go to the "My Stuff" area and log in to check status, update your request, and access other features.

- Embedded Design Resource Center – This service is also free and available 24 hours a day at the Ampro web site at <http://www.ampro.com>. However, you must be registered online before you can log in to access this service.

The Embedded Design Resource Center was created as a resource for embedded system developers to share Ampro's knowledge, insight, and expertise gained from years of experience. This page contains links to White Papers, Specifications, and additional technical information.

**Table A-1. USA Technical Support Contact Information**

Method	Contact Information
Virtual Technician	<a href="http://ampro.custhelp.com">http://ampro.custhelp.com</a>
Web Site	<a href="http://www.ampro.com">http://www.ampro.com</a>
Standard Mail	Ampro Computers, Incorporated 5215 Hellyer Avenue San Jose, CA 95138-1007, USA

## Getting Updates

This feature is provided for you on the LittleBoard 700 Doc & SW (Documentation & Software) CD-ROM and is a hot link to Ampro's Web site. You can access the latest updates by clicking on *Check for Latest Updates* in your CD-ROM's main menu. The link on the CD-ROM takes you to the Ampro web site where the search and compare engine on the web site compares your current CD-ROM to the latest files available on the Ampro web site.

Once you have made a selection of desired type of material to update, the search and compare engine generates a list of the current manuals or software updates not on your CD-ROM and displays this list on the screen for you to view. Once the list is displayed you can select the desired updates or new files from the list you want to download to your PC. You can then printout the updates or files, save it to disk, or store it on a new CD-ROM. This list includes documentation and software updates. However, you must be registered online before you can log in to the Ampro web site to access this information.



# Appendix B I/O Interface Board

The I/O Interface board provides the connections for the keyboard, mouse, four USB, and all the standard audio input/output connections for the LittleBoard 700. The I/O Interface board also provides the Infrared (IR) transceiver, an auxiliary battery connection, an auxiliary voltage connector, PC speaker, and the reset switch.

**NOTE** If you need more information about the I/O Interface board than is provided in this Appendix, refer to the LittleBoard 700 Doc & SW CD-ROM for a schematic, board layout, and BOM/AVL.

## I/O Interface Board Layout

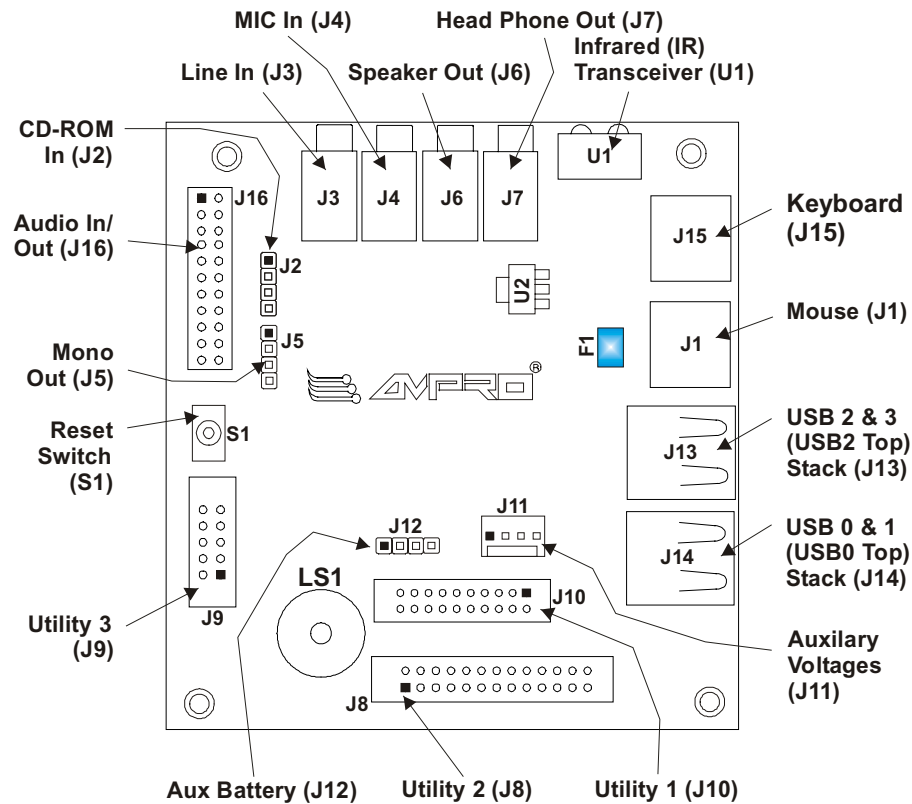


Figure B-1. I/O Interface Board

## I/O Interface Board Interface Connectors

Table B-1. Utility 1 Interface Pin/Signal Descriptions (J10)

Pin #	Signal	To Onboard Connector & Pin #	Description
1	-12	J11-1	-12 Volts
2	GND1	GND	J11-2 & 4 tied to Ground
3	-5V	J11-3	-5 Volts
4	GND2	GND	Ground

Pin #	Signal	To Onboard Connector & Pin #	Description
5	LED+	NC	Not connected – Power On LED
6	PWR Good	NC	Not connected – Power Good
7	SPKR+	LS1-1	Speaker + Output
8	GND3	GND	Ground
9	RSTSW*	S1-1	Reset Switch
10	KBD SW	NC	Not connected (Keyboard Switch)
11	KBDATA	J15-1	Keyboard Data
12	KBCLK	J15-6	Keyboard Clock
13	GND4	GND	Keyboard Ground
14	KBD PWR	To F1 (Fuse), to J15-5, to J1-5 (Mouse PWR)	Keyboard (and Mouse) +5V Power in line with Fuse F1
15	BATV+	J12-1	Backup Battery
16	BATV-	J12-4	Ground

**Notes:** The shaded area denotes power or ground.

**Table B-2. Utility 2 Interface Pin/Signal Descriptions (J8)**

Pin #	Signal	To Onboard Connector & Pin #	Description
1	LIDSW	NC	Not connected (Lid Switch simulator)
2	PWRBT#	NC	Not connected (Power Button switch)
3	BATLOW	NC	Not connected (Battery Low simulator)
4	IR_MODE	NC	Not connected (IR Mode Select)
5	IRTX	U1-2	IR Transmit Data
6	IRRX	U1-3	IR Receive Data
7	GND1	GND	Ground
8	VCC1	+5 volt Line	+5V
9	MDATA	J1-1	Mouse Data
10	MCLK	J1-6	Mouse Clock
11	GND2	GND	Ground
12	VCC2	+5 volt Line	+5V
13	SMBCLK	NC	Not connected (SMBus Clock)
14	SMBDATA	NC	Not connected (SMBus Data)
15	USB1PWR	J14-A1	+5V USB Port Power – Port is disabled if this input is low.
16	USB2PWR	J14-B1	+5V USB Port Power – Port is disabled if this input is low.
17	USBP1-	J14-A2	USB 1 Signal – (USB0)
18	USBP2-	J14-B2	USB 2 Signal – (USB1)
19	USBP1+	J14-A3	USB 1 Signal + (USB0)
20	USBP2+	J14-B3	USB 2 Signal + (USB1)

Pin #	Signal	To Onboard Connector & Pin #	Description
21	USB1GND	J14-A4	USB Port ground
22	USB2GND	J14-B4	USB Port ground
23	SHIELD1	J14-5 &6	USB Port shield (Cable Shield)
24	SHIELD2	J14-7 &8	USB Port shield (Cable Shield)

**Notes:** The shaded area denotes power or ground. USB A on top and USB B on bottom.

**Table B-3. Utility 3 Interface Pin/Signal Descriptions (J9)**

Pin #	Signal	To Onboard Connector & Pin #	Description
1	USB3PWR	J13-A1	+5V USB Port Power – Port is disabled if this input is low.
2	USB4PWR	J13-B1	+5V USB Port Power – Port is disabled if this input is low.
3	USBP3-	J13-A2	USB 3 Signal – (USB2)
4	USBP4-	J13-B2	USB 4 Signal – (USB3)
5	USBP3+	J13-A3	USB 3 Signal + (USB2)
6	USBP4+	J13-B3	USB 4 Signal + (USB3)
7	USB3GND	J13-A4	USB Port ground
8	USB4GND	J13-B4	USB Port ground
9	SHIELD3	J13-5 &6	USB Port shield (Cable Shield)
10	SHIELD4	J13-7 &8	USB Port shield (Cable Shield)

**Notes:** The shaded area denotes power or ground. USB A on top and USB B on bottom.

**Table B-4. Audio Interface Pin/Signal Descriptions (J16)**

Pin #	Signal	To Onboard Connector & Pin #	Description
1	VIDEO_L	NC	Not Connected (Video audio left channel)
2	VIDEO_GND	NC	Not Connected (Video digital ground)
3	VIDEO_R	NC	Not Connected (Video audio right channel)
4	CD_L	J2-1	CD-ROM left channel
5	CD_GND	J2-2 &-3	CD-ROM digital ground
6	CD_R	J2-4	CD-ROM right channel
7	LINE_IN_L	J3-5	Line in left channel
8	LINE_IN_GND	J3-1 (Ring)	Line in digital ground
9	LINE_IN_R	J3-2	Line in right channel
10	MIC1	J4-2 & -5	Microphone in left channel
11	MIC_GND	J4-1 (Ring) &-4	Microphone digital ground
12	MIC2	NC	Not connected (Microphone in right channel)
13	MIC_REF	J4-2 & -5	Microphone reference signal
14	KEY	NC	Key – Not connected

Pin #	Signal	To Onboard Connector & Pin #	Description
15	PHONE_IN	J5-1	Phone signal in
16	PHONE_GND	J5-2	Phone digital ground
17	MONO_OUT	J5-3	Monaural signal out
18	MONO_GND	J5-4	Monaural digital ground
19	-AOUT_L	J6-1 (Ring)	- Audio out left channel
20	+AOUT_L	J6-5	+ Audio out left channel
21	-AOUT_R	J6-1 (Ring)	- Audio out right channel
22	+AOUT_R	J6-2	+ Audio out right channel
23	GND	J7-1 (Ring)	Ground
24	HP_L	J7-5	Headphone left channel
25	HP_R	J7-2	Headphone right channel
26	HP_DETECT	J7-3	Headphone signal detect

**Notes:** The shaded area denotes power or ground.

# Appendix C Connection Part Numbers

The following table provides the part numbers, or the equivalent, and if applicable the ribbon-cable part number for the mating connector to the referenced connectors on the LittleBoard 700. All connectors use 0.100" (2.54mm) pin spacing unless otherwise indicated.

**Table C-1. Connector and Manufacture's Part Numbers**

Connector	Designation	Pin #	Mfg	Part Number
J2	Fan	3-pin	Molex	Housing 22-01-2037 Pins 08-50-0114 (discrete wires)
J10	Power In	7-pin	Molex AMP	Housing 09-50-8073 Housing 770849-7
			Molex AMP	Pins 08-52-0071 (discrete wires) Pins 350980 (discrete wires)
J5, J18	Video (CRT), Utility 3	10-pin	MMT PHYCO	Housing IDCA001-F0502GFT Housing 1100-10NP
			Belden	Flat Cable 9L28010
J4, J16	Video (LCD 2), Utility 1	16-pin	MMT PHYCO	Housing IDCA001-F0802GFT-K Housing 1100-16
			Belden	Flat Cable 9L28016
J11, J13	Serial A & B	20-pin	MMT PHYCO	Housing IDCA001-F1002GFT-K Housing 1100-20
			Belden	9L28020
J31	Video (LVDS)	20-pin, 1.25mm	Molex	Housing 51127-2005 Pins 50516-8041 (discrete wires)
J24	Utility 2	24-pin	3M Amphenol	Housing 3626-6600 Housing 812-1633-1118H
			Belden	Flat Cable 9L28024
J15	Parallel	26-pin	MMT PHYCO	Housing IDCA001-F1302GFT Housing 1100-26NP
			Belden	Flat Cable 9L28025
J28	Audio In/Out	26-pin, 2mm	MMT FCI	Housing IDCB-F1302GFT Housing 89947-126
			Belden	Flat Cable 2L28016
J14	Floppy	34-pin	AMP PHYCO	Housing 746285-8 Housing 1100-34NP
			Belden	Flat Cable 9L28034
			Molex Samtec	Key Plug 15-04-0292 Key Plug PK-01
J12, J17	Primary & Secondary IDE	40-pin	3M	Housing 3417-7040
			Belden	Flat Cable 9L28040
			3M	Key Plug 3435-0
J3	Video (LCD 1)	50-pin	3M	Housing 3425-7050
			Belden	Flat Cable 9L28050





